



By Appointment to  
Her Majesty Queen Elizabeth II  
Suppliers of Commercial Refrigeration  
Foster Refrigerator, King's Lynn

# Undercounter, Space Saver, Prep Tables & XR415 Cabinet & Counter Models

BIT25 Controller & LCD5S Display

Original Service Manual

English



Foster Refrigerator  
Oldmedow Road  
King's Lynn  
Norfolk, PE30 4JU  
United Kingdom

A division of ITW Ltd



Call: +44 (0)843 216 8800

Fax: +44 (0)843 216 4700

Email: [support@foster-uk.com](mailto:support@foster-uk.com)

[www.fosterrefrigerator.co.uk](http://www.fosterrefrigerator.co.uk)

Contents	Page
Manual Information & Health & Safety Notes	1
Environmental Management Policy	2
Disposal Requirements & Electrical Safety	2
Displays Icons & Switches	3
BIT25 User Functions - Start Up, Set Point, Standby, Key Security & Defrost Function	3 to 4
BIT25 Controller Connection Drawing & Configuration of Parameters	4 to 5
BIT25 Controller Default Parameters	5 to 9
Model Temperature Specific Parameters	10 to 12
Wiring Diagram	12
Drawer removal & Cleaning Instructions	14 to 15
Troubleshooting	16 to 18

### Service Manual Information:

The products and all information in this manual are subject to change without prior notice. We assume by the information given that the person(s) working on these refrigeration units are fully trained and skilled in all aspects of their workings. Also that they will use the appropriate safety equipment and take or meet precautions where required. The service manual does not cover information on every variation of this unit; neither does it cover the installation or every possible operating or maintenance instruction for the units.

### Health & Safety Warnings & Information



Make sure the power supply is turned off before making any electrical repairs.



To minimise shock and fire hazards, please do not plug or unplug the unit with wet hands.



During maintenance and cleaning, please unplug the unit where required.



Care must be taken when handling or working on the unit as sharp edges may cause personal injury. We recommend the wearing of suitable PPE.



Ensure the correct moving and lifting procedures are used when relocating a unit.



Do NOT use abrasive cleaning products, only those that are recommended. Never scour any parts of the refrigerator. Scouring pads or chemicals may cause damage by scratching or dulling polished surface finishes.



Failure to keep the condenser clean may cause premature failure of the motor/compressor which will NOT be covered under warranty policy.



Do NOT touch the cold surfaces in the freezer compartment. Particularly when hands are damp or wet, skin may adhere to these extremely cold surfaces and cause frostbite.



Please ensure the appropriate use of safety aids or Personnel Protective Equipment (PPE) are used for your own safety.



## Environmental Management Policy

### Product Support and Installation Contractors.

Foster Refrigerator recognises that its activities, products and services can have an adverse impact upon the environment.

The organisation is committed to implementing systems and controls to manage, reduce and eliminate its adverse environmental impacts wherever possible, and has formulated an Environmental Policy outlining our core aims. A copy of the Environmental Policy is available to all contractors and suppliers upon request.

The organisation is committed to working with suppliers and contractors where their activities have the potential to impact upon the environment. To achieve the aims stated in the Environmental Policy we require that all suppliers and contractors operate in compliance with the law and are committed to best practice in environmental management.

Product Support and Installation contractors are required to:

1. Ensure that wherever possible waste is removed from the client's site, where arrangements are in place all waste should be returned to Foster Refrigerator's premises. In certain circumstances waste may be disposed of on the client's site; if permission is given, if the client has arrangements in place for the type of waste.
2. If arranging for the disposal of your waste, handle, store and dispose of it in such a way as to prevent its escape into the environment, harm to human health, and to ensure the compliance with the environmental law. Guidance is available from the Environment Agency on how to comply with the waste management 'duty of care'.
3. The following waste must be stored of separately from other wastes, as they are hazardous to the environment: refrigerants, polyurethane foam, and oils.
4. When arranging for disposal of waste, ensure a waste transfer note or consignment note is completed as appropriate. Ensure that all waste is correctly described on the waste note and include the appropriate six-digit code from the European Waste Catalogue. Your waste contractor or Foster can provide further information if necessary.
5. Ensure that all waste is removed by a registered waste carrier, a carrier in possession of a waste management licence, or a carrier holding an appropriate exemption. Ensure the person receiving the waste at its ultimate destination is in receipt of a waste management licence or valid exemption.
6. Handle and store refrigerants in such a way as to prevent their emission to atmosphere, and ensure they are disposed of safely and in accordance with environmental law.
7. Make arrangements to ensure all staff who handle refrigerants do so at a level of competence consistent with the City Guilds 2079 Handling Refrigerants qualification or equivalent qualification.
8. Ensure all liquid substances are securely stored to prevent leaks and spill, and are not disposed of into storm drains, foul drain, or surface water to soil.

### Disposal Requirements

If not disposed of properly all refrigerators have components that can be harmful to the environment. All old refrigerators must be disposed of by appropriately registered and licensed waste contractors, and in accordance with national laws and regulations.

### General Electrical Safety

Foster Refrigerator recommends that the equipment is electrically connected via a Residual Current Device; such as a Residual Current Circuit Breaker (RCCB) type socket, or through a Residual Current Circuit Breaker with Overload Protection (RCBO) supplied circuit.

## Controller Operation - BIT25

The controller consists of two pieces, the controller (BIT25) and separate display (LCD5S).

### LCD5S Display Icons and Switches



Display Indicators & Buttons		Alarms/ Warnings During Normal Operation	
	Info/ Set Point Button	<i>oFF</i>	Controller in Standby
	Manual Defrost/ Decrease Button	<i>h i</i>	Room High Temperature Alarm
	Manual Activation/ Increase Button	<i>Lo</i>	Room Low Temperature Alarm
	Exit/ Standby Button	<i>E 1</i>	Probe T1 Failure (Air)
	Thermostat/ Compressor Output	<i>ALr</i>	Generic Alarm
	Fan Output	<i>dEF</i>	Defrost In Progress
	Alarm Warning		Keypad Locked
	Defrost Output		

Information Menu Symbols and Reasons			
<i>t 1</i>	Instant probe 1 temperature	<i>tLo</i>	Minimum probe 1 temperature recorded
<i>th i</i>	Maximum probe 1 temperature recorded	<i>end</i>	Compressor working weeks **

\*\* Displayed only if ACC > 0

## Start Up and Operation

### User Functions

#### Start Sequence

When the unit is first connected to the mains the display will automatically light up and show either *oFF* or the current ambient temperature.

#### To start or activate when in standby:

- > Press and hold the  button for 5 seconds then release.

#### Access to the menu and information displayed

- > Press and immediately release button .
- > With button  or  select the data to be displayed
- > Press and hold button  to display the value
- > To exit from the menu, press button  or wait for 10 seconds.

### Set point: Display and modification

- > Press button **i** and hold to display the set point.
- > By keeping button **i** pressed, use button ◀ or ▶ to set the desired value (adjustment is within the minimum SPL and the maximum SPH limit)
- > When button **i** is released, the new value is stored.

### Standby

Pressing the button for 3 seconds, will allow the controller to be put on a standby or output control to be resumed (with SB = YES only). When on Standby **OFF** will be displayed.

### Keypad Unlock

Press & release **i** then use ▶ to select 'LOC'. Press and hold **i** to change from 'YES' to 'NO'. Leave for 10 seconds or briefly press to resume.

### Defrost




#### Automatic Defrost

The cabinet will defrost automatically on a predefined schedule. This setting will also automatically terminate on a predefined schedule.

#### Manual Defrost. (Freezer Sections only)

To initiate a manual defrost press and hold the defrost button for 2 seconds

### Controller Connection Drawing and Dimensions

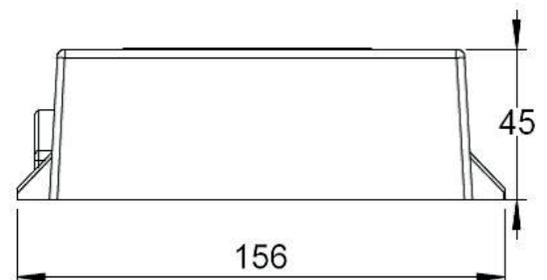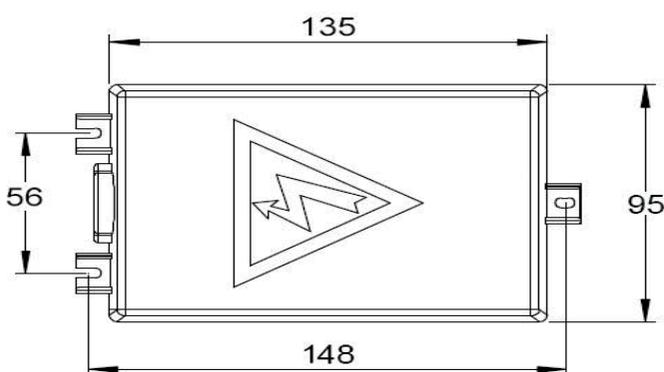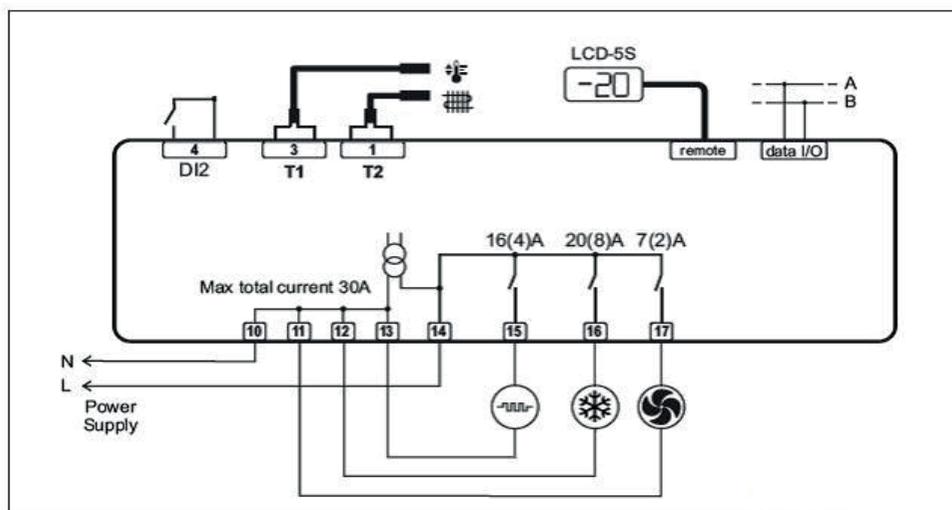

(Dimensions in mm)

## Controller Technical Data

### Power Supply

BIT25 ... E 230Vac±10%, 50/60Hz, 3W

### Relay Output

Compressor

Auxiliary Loads 1 16(4)A 240Vac

Auxiliary Loads 2 7(2)A 240Vac

### Input

NTC 10KΩ@25°C

### Measurement Range

-50 / -9.9...19.9 /110°C

### Measurement Accuracy

<0.5°C within the measurement range

### Operating Conditions

-10...+50°C; 15%...80%r.H

### CE (Reference norms)

20(8)A 240Vac

EN55022 (Class B)

EN50082-1

## Configuration Parameters

- > To access to the parameter configuration menu, press  +  for 5 seconds
- > With button  or  select the parameter to be modified.
- > Press button  and hold briefly to display the value. On releasing the button the controller will then show the next parameter.
- > By keeping button  pressed, use button  or  to set the desired value. On releasing the button the controller will store the amended value and then show the next parameter.
- > To exit from the setup, press button  or wait for 30 seconds.

## BIT25 Controller Default Parameter Values

Parameter	Range	Description	Default Setting	
SPL	-50 ... SPH	Minimum limit for 'SP' setting.	1	
SPH	SPL ... 110°	Maximum limit for 'SP' setting.	3	
SP	SPL ... SPH	Temperature setpoint to be achieved.	2	
C-H	REF or HEA	Refrigeration or Heating control mode.	REF	
HYS	1 ... 10°	Off / On thermostat differential.	3	
CRT	0 ... 30 min	Compressor rest time.	2	
CT1	0 ... 30 min	Thermostat run time with faulty T1 probe. (‘CT1’ = 0 output with faulty T1 will always be off).	6	
CT2	0 ... 30 min	Thermostat off time with faulty T1 probe. (‘CT2’ = ‘0’ & ‘CT1’ => ‘0’ output with faulty T1 will always be on).	4	
CSD	0 ... 30 min	Compressor stop delay after door has been opened. (Only if ‘DS’ = ‘YES’).	1	
DFM		<b>Defrost start mode:</b>	TIM	
	NON	Defrost function is disabled (the following parameter will be 'FCM').		
	TIM	Regular time defrost.		
	FRO	Defrost time elapses only in condition of frost accumulation.		
DFM = 'TIM' or 'FRO'	DFT	0 ... 99 hours	Time interval between defrosts.	6
	DFB		<b>Defrost timer clock.</b>	YES
		YES	Following mains interruption, timer resumes count.	
		NO	Following mains interruption, timer restarts from zero.	
	DLI	-50 ... 110°	Defrost end temperature (Only if ‘T2’ = ‘YES’).	15
	DTO	1 ... 120 min	Maximum defrost duration.	20

Parameter	Range	Description	Default Setting	
DFM = 'TIM' or 'FRO'	DTY	<b>Defrost type:</b>	OFF	
		OFF		Timed off cycle defrost (compressor and heater off).
		ELE		Electric heater defrost (compressor off, heater on).
		GAS	Hot gas defrost (compressor and heater on).	
	DPD	0 ... 240 sec	Evaporator pump down. Timed pause at start of defrost.	0
	DPR	0 ... 20 sec	Defrosting Pressure Reduction. Period between hot gas valve shutting and compressor stopping (only active when 'DTY' = 'GAS').	3
	DRN	0 ... 30 min	Drain down period.	2
	DDM	<b>Defrost display mode:</b>		DEF
		RT	Real (actual) air temperature.	
		LT	Last temperature display before start of defrost.	
		SP	The current setpoint value.	
		DEF	"DEF"	
	DDY	0 ... 60 min	Defrost display delay period. Time 'DDM' is shown following defrost termination.	10
	FID	<b>Fans in defrost:</b>		YES
		YES	Fans run during defrost.	
	NO	Fans do not run during defrost.		
FDD	-50 ... 110°	Evaporator fan restart temperature following defrost. (Only if 'T2' = 'YES').	5	
FTO	0 ... 120 min	Maximum evaporator fan stop period following defrost (only when 'T2' = 'YES').	3	
FCM	<b>Evaporator fan mode during thermostatic control:</b>		NON	
	NON	Fan(s) run continuously (subject to door & defrost).		
	TMP	Temperature based control. When compressor is on, fans are on. When compressor is off, fans run as long as temperature difference $T_e - T_a > 'FDT'$ . Fans on again with 'FDH'.		
	TIM	Time based control. When compressor is on, fans are on. When compressor is off, fans in accordance to parameters FT1', 'FT2' and 'FT3'.		
FDT	-12.0 ... 0°	$T_e - T_a$ difference for fans to turn off after compressor stopped. (Only if 'T2' = 'YES' and 'FCM' = 'TMP').	-1	
FDH	1 ... 12.0 °	Temperature differential for evaporator fan restart. (Only if 'T2' = 'YES' and 'FCM' = 'TMP').	3	
FDS	0 ... 120 sec	Minimum evaporator fan stop period (following door opening etc.).	20	
FT1	0 ... 180 sec	Fan stop delay after compressor stop.	15	
FT2	0 ... 30 min	Timed fan stop following 'FT1'. (With FT2 = '0' the fans remain on all the time).	0	
FT3	0 ... 30 min	Timed fan run following 'FT2'. (With 'FT3' = '0' & 'FT2' > '0' the fans remain off all the time).	2	
ATM	<b>Alarm threshold configuration:</b>		REL	
	NON	All temperature alarms are inhibited (the following parameter will be 'ADO').		
	ABS	The value set in 'ALA' & 'AHA' represent actual alarm setpoints.		
	REL	The values set in 'ALR' & 'AHR' are alarm differentials which relate to 'SP' and 'SP' + 'HYS' (the following parameter will be 'ALR').		

Parameter		Range	Description	Default Setting	
ATM = 'ABS'	ALA	-50 ... 120°	Low temperature alarm threshold.	-3	
	AHA	-50 ... 120°	High temperature alarm threshold (the following parameter will be 'AT1').	8	
ATM = 'REL'	ALR	-12 ... 0°	Low temperature alarm differential. With 'ALR' = '0' the low temperature alarm is excluded).	-5	
	AHR	0 ... 12°	High temperature alarm differential. (With 'AHR' = '0' the low temperature alarm is excluded).	5	
ATM = 'ABS' or 'REL'	AT1	<b>Alarm probe:</b>		T1	
		T1	Air temperature probe used for alarm detection.		
		T2	Evaporator temperature probe used for alarm detection (if 'T2' = 'YES').		
	ATD	0 ... 120 min	Delay before alarm temperature warning.	90	
ADO	0 ... 30 min	Delay before door open alarm warning (only when 'DI2' = 'DOR').	8		
AHM	<b>Operation in case of high condenser alarm (if 'DI2' = 'T3' and 'T3' = 'CND'):</b>			NON	
	NON	High condenser temperature alarm inhibited.			
	ALR	Condenser warning - 'HC' displayed, alarm sounds.			
	STP	As 'ALR', with compressor stopped and defrosts suspended.			
AHT	-50 ... 110°	Condenser alarm temperature (if 'DI2' = 'T3').		65	
ACC	'0 ... 52 weeks	Condenser cleaning period. (With 'ACC' = '0' condenser cleaning alarm is disabled).		0	
IISM	<b>Switch over method to second parameter set:</b>			NON	
	NON	Second parameter set is excluded (the following parameter will be 'SB').			
	MAN	Second parameter set is activated / deactivated by button 'M'.			
	DI2	Second parameter set activated by 'DI2' input ('DI2' = 'IISM').			
ATM = 'ABS' or 'REL'	IISL	-50 ... IISH	Minimum limit for 'IISP' setting.	1	
	IISH	IISL ... 110°	Maximum limit for 'IISP' setting.	1	
	IISP	IISP ... IISH	Temperature setpoint to be achieved in 'Mode 2'.	1	
	IIHY	1 ... 10°	Off / On thermostat differential in 'Mode 2'.	3	
	IIFC	<b>Evaporator fan mode during 'Mode 2' thermostatic control:</b>			NON
		NON	Fan(s) run continuously.		
		TMP	Temperature based control. When compressor is on, fans are on. When compressor is off, fans run as long as temperature difference $T_e - T_a > 'FDT'$ . Fans on again with 'FDH'.		
	TIM	Time based control. When compressor is on, fans are on. When compressor is off, fans in accordance to parameters T1', 'FT2' and 'FT3'.			
IIDF	0 ... 99 hours	Time interval between defrosts in 'Mode 2'.		6	
SB	<b>Standby button operation:</b>			YES	
	YES	Standby button enabled.			
	NO	Standby button disabled.			

Parameter	Range	Description	Default Setting	
DI1		<b>Configurable digital input operation:</b>	NON	
	NON	Digital input not activated.		
	DOR	Door switch input.		
	ALO	Alarm ('ALr' displayed) when contact opens.		
	ALC	Alarm ('ALr' displayed) when contact closes.		
DI2		<b>Configurable digital input operation:</b>	NON	
	NON	Digital input not activated.		
	DOR	Door switch input.		
	ALO	Alarm ('ALr' displayed) when contact opens.		
	ALC	Alarm ('ALr' displayed) when contact closes.		
	PSP	Allows control via potentiometer.		
	IISM	Operates 2nd parameter set when contact closes.		
T3	Allows for 3rd temperature probe function.			
D12 = 'T3'	T3		DSP	
		DSP		T3 probe temperature displayed.
	CND	Condenser temperature measurement.		
OS3	-12.5 ... 12.5°C	T3 probe temperature offset (only when 'DI2' = 'T3'):	0	
D12 = 'PSP'	PSL	-50 ... 70°C	Minimum setpoint adjusted by potentiometer (only when 'DI2' = 'PSP'):	10
	PSR	0.0 ... 15.0°C	Range of setpoint (hysteresis) for potentiometer (only when 'DI2' = 'PSP'):	10
D12 = 'PSP'	POF		YES	
				<b>Potentiometer standby enabling operation (only when 'DI2' = 'PSP'):</b>
	LSM	YES	Potentiometer standby enabled (when turned to minimum, controller set to standby).	
		NO	Potentiometer standby disabled.	
			<b>Light control mode (if 'OA1' = 'LGT'):</b>	MAN
		NON	Light Control Mode disabled (always off).	
		MAN	Light output operation is activated / deactivated by button 'M'.	
D10	Light output is switched on when door is opened (if 'DI1' = 'DOR').			
D20	Light output is switched on when door is opened (if 'DI2' = 'DOR').			
D2C	Light output is switched off when door is opened (if 'DI2' = 'DOR').			
OA1		<b>Auxiliary Relay 1 Operation:</b>	NON	
	NON	Output disabled (always off).		
	FAN	Control of evaporator fan.		
	DEF	Control of defrost heater / device (activated when 'DTY' = 'ELE' or 'GAS').		
	LGT	Output enabled for light control.		
	0-1	Contacts open/close with 'Standby'/'On' mode ('SB' = 'YES').		
	ALO	Contacts open when an alarm condition occurs.		
	ALC	Contacts close when an alarm condition occurs.		
		(Relay contacts open when in stand by mode).		

Parameter	Range	Description	Default Setting
OA2		<b>Auxiliary Relay 2 Operation:</b>	FAN
	NON	Output disabled (always off).	
	FAN	Control of evaporator fan.	
	DEF	Control of defrost heater / device (activated when 'DTY' = 'ELE' or 'GAS').	
	LGT	Output enabled for light control.	
	0-1	Contacts open/close with 'Standby'/'On' mode ('SB' = 'YES').	
	ALO	Contacts open when an alarm condition occurs.	
	ALC	Contacts close when an alarm condition occurs.	
		(Relay contacts open when in stand by mode).	
OS1	-12.5 ... 12.5°C	Air temperature probe (T1) offset.	0
T2		<b>T2 probe enabling:</b>	NO
	YES	T2 probe enabled.	
	NO	T2 probe disabled.	
OS2	-12.5 ... 12.5°C	Evaporator temperature probe (T2) offset.	0
TLD	1 ... 30 min	Delay for min. ('TLO') and max. ('THI') temperature logging.	10
SCL		<b>Readout scale:</b>	2°C
	1°C	Range -50 ... 110°C (0.1°C resolution within -9.9 to +19.9°C)	
	2°C	Range -50 ... 110°C	
	°F	Range -58 ... 180°F	
SIM	0 ... 100	Display slowdown.	5
ADR	1...255	BIT25 address for PC communication	1

\*Dark grey highlight denotes a parameter that may not be visible unless another is set to a specific value.  
For example: OS3 will not show unless DI2 = T3

## Model Specific Parameter Values

Parameter	Parameter Description	Controller Default									
		HR140, 150-A, 200, 360, HR200FT & 360FT	HR140, 150-A, 200 & 360 (with Light)	LR140 & 150-A	HR100 BK, 120, 240 & HRB120	HR120 & 240 (with Lights)	HR200 & 360 (Starbucks)	LR120, 240 & LRB120	LR200 & 360	HR150 (Germany)	LR160 (One Shot)
SPL	Minimum limit for 'SP' setting.	3	3	-21	1	1	0	-21	-21	1	-30
SPH	Maximum limit for 'SP' setting.	3	3	-21	3	3	10	-19	-19	3	-8
SP	Temperature setpoint to be achieved.	3	3	-21	1	1	3	-21	-21	1	-15
C-H	Refrigeration/ heating control mode.	REF	REF	REF	REF	REF	REF	REF	REF	REF	REF
HYS	Off / On thermostat differential.	3	3	3	3	3	3	3	3	3	3
CRT	Compressor rest time.	4	4	4	2	2	4	2	2	4	1
CT1	Thermostat run time with faulty T1 probe.	6	6	6	6	6	6	6	6	6	6
CT2	Thermostat off time with faulty T1 probe.	4	4	4	4	4	4	4	4	4	4
CSD	Compressor stop delay after door has been opened.	1	1	1	1	1	1	1	1	1	1
DFM	Defrost start mode.	TIM	TIM	NON	TIM	TIM	TIM	TIM	TIM	TIM	TIM
DFT	Time interval between defrosts.	6	6	6	6	6	4	6	6	6	6
DFB	Defrost timer clock.	YES	YES	YES	YES	YES	YES	YES	YES	YES	YES
DLI	Defrost end temperature	15	15	15	15	15	10	15	15	15	10
DTO	Maximum defrost duration.	20	10	20	10	10	20	20	10	10	10
DTY	Defrost type.	OFF	OFF	OFF	OFF	OFF	OFF	ELE	ELE	OFF	ELE
DPD	Evaporator pump down. Timed pause at start of defrost.	0	0	0	0	0	0	0	0	0	0
DPR	Defrosting Pressure Reduction (used when 'DTY' = 'GAS' to over-run compressor).	3	3	3	3	3	3	3	3	3	3
DRN	Drain down period.	2	3	2	2	2	3	2	2	3	2
DDM	Defrost display mode.	DEF	DEF	DEF	DEF	DEF	DEF	DEF	DEF	DEF	SP
DDY	Defrost display delay period.	10	10	10	10	10	10	10	10	10	10
FID	Fans in defrost.	YES	YES	NO	YES	YES	YES	NO	NO	YES	NO
FDD	Evaporator fan restart temperature following defrost.	5	5	5	5	5	5	5	5	5	0



		BOA	BOB	BOC	BOD	BOE	BOF	BOG	BOH	BOK	BOL
FTO	Maximum evaporator fan stop period following defrost (only when 'T2' = 'YES').	3	3	3	3	3	3	3	3	3	3
FCM	Evaporator fan mode during thermostatic control.	NON									
FDT	Te-Ta difference for fans to turn off after compressor stopped.	-1	-1	-1	-1	-1	-1	-1	-1	-1	-1
FDH	Temperature differential for evaporator fan restart.	3	3	3	3	3	3	3	3	3	3
FDS	Minimum evaporator fan stop period (following door opening etc.)	20	20	20	20	20	20	20	20	20	20
FT1	Fan stop delay after compressor stop.	15	15	15	15	15	15	15	15	15	15
FT2	Timed fan stop following 'FT1'.	0	0	0	0	0	0	0	0	0	0
FT3	Timed fan run following 'FT2'.	2	2	2	2	2	2	2	2	2	2
ATM	Alarm threshold configuration.	REL									
ALR	Low temperature alarm differential.	-5	-5	-5	-5	-5	-5	-5	-5	-5	-5
AHR	High temperature alarm differential.	5	5	5	5	5	5	5	5	5	5
ATI	Alarm probe.	T1									
ATD	Delay before alarm temperature warning.	90	90	90	90	90	90	90	90	90	90
ADO	Delay before door open alarm warning (only when 'DI2' = 'DOR').	8	8	8	8	8	8	8	8	8	8
AHM	Operation in case of high condenser alarm (if 'DI2' = 'T3' and 'T3' = 'CND');	NON									
ACC	Condenser cleaning period.	0	0	0	0	0	0	0	0	0	0
IISM	Switch over method to second parameter set.	NON									
SB	Standby button operation.	YES									
DI1	Configurable digital input 1 operation.	NON									
DI2	Configurable digital input 2 operation.	NON									
LSM	Light control mode (if 'OA1' = 'LGT').	NON	MAN	NON	NON	MAN	NON	NON	NON	NON	NON
OA1	Auxiliary Relay 1 Operation.	NON	LGT	NON	NON	LGT	NON	DEF	DEF	NON	DEF
OA2	Auxiliary Relay 2 Operation.	FAN									
OS1	Air temperature probe (T1) offset.	0	0	0	0	0	0	0	0	0	0
T2	T2 probe enabling.	NO	NO	NO	NO	NO	NO	YES	YES	NO	YES
OS2	Evaporator temperature probe (T2) offset.	0	0	0	0	0	0	0	0	0	0

		BOA	BOB	BOC	BOD	BOE	BOF	BOG	BOH	BOK	BOL
TLD	Delay for min. ('TLO') and max. ('THI') temperature logging.	10	10	10	10	10	10	10	10	10	10
SCL	Readout scale.	2°C									
SIM	Display slowdown.	5	5	5	5	5	5	5	5	5	5
ADR	BIT25 address for PC communication.	1	1	1	1	1	1	1	1	1	1

\*Yellow highlight denotes a parameter different to that of the default setting


(Parameters sourced from BIT25B0Q3E-2FS Revision13 28.04.2014- Correct at time of print)



## Drawer Removal

This guide applies only to models that have drawers fitted.

**Refrigerated Drawers** can be removed by pulling out to their full extent and lifting so that the roller passes through the slots in the drawer runner. Please ensure drawers are refitted to their original position.

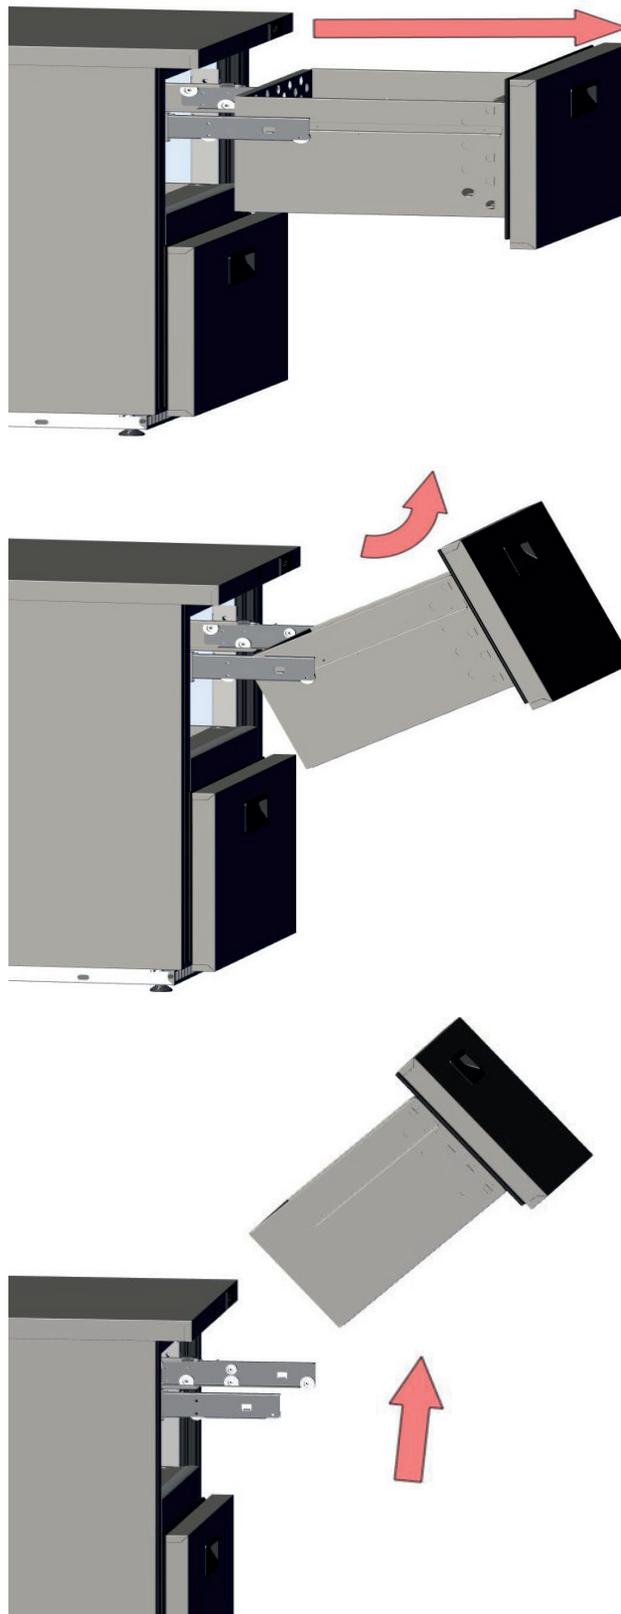

## Shelves, Supports & Drawer

Shelves - 'H' models are supplied with slotted removeable shelf supports.

The only 'L' models that have fixed shelves that are part of the freezer system and cannot be removed are the LR150-A & XR415L, all other 'L' models have removeable shelves.



## Cleaning and Maintenance

**Important:** Before cleaning, the unit should be put into standby and then the power supply should be turned off at the mains. Please do not plug or unplug the unit with wet hands. Only when cleaning has been completed and the unit is dry should the cabinet be turned back on at the mains.

**Suitable P.P.E (Personnel Protective Equipment) should be worn at all times.**

Regular Maintenance:

> As and when required remove all product from the unit. Clean exterior and interior surfaces with mild liquid detergent, following the directions on the pack at all times. Rinse surfaces with a damp cloth containing clean water. Never use wire wool, scouring pads/powders or high alkaline cleaning agents i.e bleaches, acids and chlorines as these may cause damage.

> **Condenser Cleaning:**

This should take place on a regular basis (4 to 6 weeks) or as and when required by a competent/trained personnel.

Use a soft brush or vacuum cleaner to remove dirt/dust. If there are any stubborn grease deposits left on or through the condenser, call your supplier to carry out a full service (this is normally chargeable). Failure to maintain the condenser may invalidate the warranty of the condensing unit and cause premature failure of the motor/compressor.

Do not use a wire brush to clean the condenser. Vacuum or brush the air filter (where fitted).

> All gaskets should be inspected on a regular basis and replaced if damaged. To clean, wipe with a warm damp soapy cloth followed by a clean damp cloth and thoroughly dry.

If gasket replacement is required, start by fitting all the corners of a gaskets into place before working the rest of the length of the gasket into the retainer. Failure to follow this procedure may result in the gasket stretching and fitment not being possible.

## Troubleshooting

Problem	Possible Cause	Solution
Compressor will not start	No voltage in socket	Use voltmeter to check
	Electrical conductor or wires may be cut	Use ohmmeter to check for continuity
	Defective electrical component; thermostat, relay, thermal protector etc.	Replace defective component
	Compressor motor has a winding open or shorted	Measure ohmic resistance of main and auxiliary winding using ohmmeter. Compare with correct values
	Compressor stuck	Change compressor
	Temperature control contacts are open	Repair or replace the contacts
	Incorrect wiring	Check wiring diagram and correct
	Fuse blown or circuit breaker tripped	Replace fuse or reset circuit breaker
	Power cord unplugged	Plug in power cord
	Controller set too high	Set controller to lower temperature
	Cabinet in defrost cycle	Wait for defrost cycle to finish
The temperature is too cold	Controller is set at a very cold position	Set to warmer position and check if the compressor stops according to controllers operating range
	Controller does not disconnect the condensing unit	Check the insulation of the Thermostat. If problem persists, change the thermostat
	Control contacts are stuck closed	Change the control. Check amperage load
	Defective or incorrect temperature control	Determine correct control and replace
The temperature is not cold enough	Controller is set at a very warm position	Adjust to colder setting
	Condenser is dirty	Clean condenser
	The refrigerator has been placed at an inadequate location	The unit must not be near stoves, walls that are exposed to the sun, or places that lack sufficient air flow
	Compressor is inefficient or there is a high pressure due to the air in the system	If there is air in the system, purge and recharge
	Iced up evaporator coil	Check temperature control refrigerant charge, and defrost mechanism. Remove all ice manually and start over.
	Restriction in system	Locate exact point of restriction and correct
	Too many door openings	Advise user to decrease if possible
	Excessive heat load placed in cabinet	Advise user not to put in products that are too hot.

The temperature is not cold enough (Continued)	The refrigerator has been overcharged with the refrigerant gas	Check to see if condensation or ice crystals have formed on the suction line. If so, charge with the correct amount of gas
	The refrigerant gas is leaking	Find the location of gas leak in order to seal and replace the defective component. Change the drier. Perform a good vacuum and recharge unit
	The evaporator and/or condenser fans are not working	Check electrical connections and make sure that the fan blade isn't stuck. Replace the fan motor if it doesn't work.
	Blocking air flow	Re-arrange product to allow for proper air flow. Make sure there is at least four inches of clearance from the evaporator.
	Fuse blown or circuit breaker tripped	Replace fuse or reset circuit breaker
Electrical Shock	Wires or electrical components are in direct contact with metallic parts	Check for appropriate insulation on the connections of each component
Noise	The refrigerator is not properly levelled	Check if the noise goes away after you level the refrigerator
	The condenser is not fastened correctly. Copper tubing is in contact with metal	While the compressor is working, check to see if metal parts are in contact with one another and/or if the screws that fasten the condenser are tightened
	The evaporator and/or condenser fans are loose	Check if the fans are securely fastened. Also, check if the fan blades are loose, broken or cracked. If so, change the faulty blade
	Compressor has an internal noise	If the noise persists after all other measures have been taken, it may be originating from the compressor.
	Loose part(s)	Locate and tighten loose part(s)
Extreme condensation inside the refrigerator	Controller is set at a very cold position	Set the controller to a warmer position & check to see if compressor stops as should
	The outside environment's relative humidity is very high (over 75%)	This type of occurrence is caused by local climatic conditions and not by the refrigeration unit
	The refrigerator door won't shut completely	Check the door and/or the magnetic gasket. Adjust the door hinges if needed; replace the gasket if broken
	The refrigerator had been placed at an inadequate location	The unit must not be near sources that produce too much heat



Condensing unit runs for long periods of time	Excessive amount of warm product placed in cabinet	Advise user to leave adequate time for products to cool down
	Prolonged door opening or door ajar	Advise user to ensure doors are closed when not in use and to avoid opening doors for long periods of time
	Door gasket(s) not sealing properly	Ensure gaskets are snapped in completely. Remove gasket and wash with soap and water. Check condition of gasket & replace if necessary
	Dirty condenser coil	Clean condenser coil
	Evaporator coil iced over	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly. Select manual defrost and ensure system works



**UK Head Office**

Foster Refrigerator  
Oldmedow Road  
Kings Lynn  
Norfolk  
PE30 4JU

a Division of ITW (UK) Ltd

Tel: +44 (0)843 216 8833  
Fax: +44 (0)843 216 4707

Email: [support@foster-uk.com](mailto:support@foster-uk.com)

Website: [www.fosterrefrigerator.co.uk](http://www.fosterrefrigerator.co.uk)