



GUARANTEEING YOU THE GREENEST REFRIGERATION AVAILABLE



Slimline Range with FD2-10 Controller



Service Manual



ISO 14001

ISO 9001



Issued August 2010

Contents

Manual Information & Health & Safety Notes	1
Environmental Management Policy	2
Disposal Requirements	2
Cabinet & Counter Description	3
Controller Relevance Table & Operation	3-4
User Functions	4-5
Defrost Operation & Fuzzy Logic	5
Wiring Diagram for Defrost & Technical Data	6
Configuration of Parameters	6
Slimline Controller Default	7-10
Individual Unit Controller Parameter Values	11-13
Technical Data	14
Wiring Diagrams & Probe details	15-17
Troubleshooting & Notes	18-20

Service Manual Information

The products and all information in this manual are subject to change without prior notice. We assume by the information given that the person(s) working on these refrigeration units are fully trained and skilled in all aspects of their workings. Also that they will use the appropriate safety equipment and take or meet precautions where required.

The service manual does not cover information on every variation of this unit; neither does it cover the installation or every possible operating or maintenance instruction for the units.

Health & Safety Warnings and Information

	Make sure the power supply is turned off before making any electrical repairs.
	To minimise shock and fire hazards, please do not plug or unplug the unit with wet hands.
	During maintenance and cleaning, please unplug the unit where required.
	Care must be taken when handling or working on the unit as sharp edges may cause personal injury, we recommend the wearing of suitable PPE.
	Ensure the correct moving and lifting procedures are used when relocating a unit.
	Do NOT use abrasive cleaning products, only those that are recommended. Never scour any parts of the refrigerator. Scouring pads or chemicals may cause damage by scratching or dulling polished surface finishes.
	Failure to keep the condenser clean may cause premature failure of the motor/compressor which will NOT be covered under warranty policy.
	Do NOT touch the cold surfaces in the freezer compartment. Particularly when hands are damp or wet, skin may adhere to these extremely cold surfaces and cause frostbite.
	Please ensure the appropriate use of safety aids or Personnel Protective Equipment (PPE) are used for you own safety.

Environmental Management Policy for Service Manuals and Duets.

Product Support and Installation Contractors

Foster Refrigerator recognises that its activities, products and services can have an adverse impact upon the environment.

The organisation is committed to implementing systems and controls to manage, reduce and eliminate its adverse environmental impacts wherever possible, and has formulated an Environmental Policy outlining our core aims. A copy of the Environmental Policy is available to all contractors and suppliers upon request.

The organisation is committed to working with suppliers and contractors where their activities have the potential to impact upon the environment. To achieve the aims stated in the Environmental Policy we require that all suppliers and contractors operate in compliance with the law and are committed to best practice in environmental management.

Product Support and Installation contractors are required to:

1. Ensure that wherever possible waste is removed from the client's site, where arrangements are in place all waste should be returned to Foster Refrigerator's premises. In certain circumstances waste may be disposed of on the client's site; if permission is given, if the client has arrangements in place for the type of waste.
2. If arranging for the disposal of your waste, handle, store and dispose of it in such a way as to prevent its escape into the environment, harm to human health, and to ensure the compliance with the environmental law. Guidance is available from the Environment Agency on how to comply with the waste management 'duty of care'.
3. The following waste must be stored of separately from other wastes, as they are hazardous to the environment: refrigerants, polyurethane foam, and oils.
4. When arranging for disposal of waste, ensure a waste transfer note or consignment note is completed as appropriate. Ensure that all waste is correctly described on the waste note and include the appropriate six-digit code from the European Waste Catalogue. Your waste contractor or Foster can provide further information if necessary.
5. Ensure that all waste is removed by a registered waste carrier, a carrier in possession of a waste management licence, or a carrier holding an appropriate exemption. Ensure the person receiving the waste at its ultimate destination is in receipt of a waste management licence or valid exemption.
6. Handle and store refrigerants in such a way as to prevent their emission to atmosphere, and ensure they are disposed of safely and in accordance with environmental law.
7. Make arrangements to ensure all staff who handle refrigerants do so at a level of competence consistent with the City Guilds 2078 Handling Refrigerants qualification or equivalent qualification.
8. Ensure all liquid substances are securely stored to prevent leaks and spill, and are **not** disposed of to storm drains, foul drain, or surface water to soil.

Disposal Requirements

If not disposed of properly all refrigerators have components that can be harmful to the environment. All old refrigerators must be disposed of by appropriately registered and licensed waste contractors, and in accordance with national laws and regulations.

Slimline Cabinet Range Description

The cabinets are manufactured as a one piece foamed shell with the condensing unit located on the base of the cabinet. All the cabinets conform to ISO Climate Class 5 (40^oc with 40% RH) with the temperature being controlled by a microprocessor with digital temperature display.

The refrigeration system is integral with an air-cooled condensing unit with the refrigerant being distributed into the evaporator controlled by capillary. This cooled air is circulated through the evaporator, via a fan in the storage area. To evaporate condensation, the plastic vaporiser tray has a hot gas line that is inserted into it.

The FSL400H & 800H have a temperature range of +1^oc to +4^oc with a timed off cycle defrost.

The FSL400L & 800L are different in that they have a temperature range of -18^oc to -21^oc with electric defrost set at 4 times per 24 hours.

The FSL400M & 800 are models designed for meat chilling and have a temperature range of -2^oc to +2^oc using R134a refrigerant.

The coding 'FSL' means Foster Slimline with the 400/800 afterwards being the respective net capacity in litres. If the model comes with an H or L this denotes High or Low temperature units as with a G meaning it has glass doors and M denoting meat.

Both glass and solid doors are fitted with pivot hinges and also both have magnetic door gaskets. Only the solid doors have recessed door handles whereas the glass is surface mounted.

On the glass door models the interior light, incorporating the on/off switch, is fitted to the top of the storage area at the front of the unit. All models fitted with lockable swivel castors to the front and swivel castors to the rear.

Controller Relavance Table

Model	1 st Serial Number Issued	Manufacturer Date from
400	E5270966	09.08.2010
800	E5270970	09.08.2010

Controller Operation

FSL400

Probe Air 2.5M SN4K15H1 (00-556248)

Probe Evap 2.5M SN4K15H2 (00-556251)

FSL800

Probe Air 4M SN4B40H1 (00-556289)

Probe Evap 4M SN4B40H2B (00-556290)

FD2-10 Controller (00-556241)

LCD 5S Display (00-555992)

LCD5 Connecting Ribbon 3m (00-555814)

(Normally only used on FSL800 Models)



LCD 5S Display (00-555992)

Indicators and Buttons

Symbol	Reason	Button	Use
	Alarm		Info / Set Point Button
	Thermostat Output		Manual Defrost / Decrease Button
	Fan Output		Increase Button / Manual Activation
	Defrost Output		Stand-by Button
	Activation of 2 nd parameter set		

Display

During normal operation the display shows either the temperature measured or one of the following indicators:

Symbol	Reason	Symbol	Reason
dEF	Defrost in progress	hP	Condenser high pressure alarm
aFF	Controller in stand-by	h ₁	Room high temperature alarm
cL	Condenser clean warning	Lo	Room low temperature alarm
do	Door open alarm	E1	Probe T1 failure
hc	Condenser high temperature alarm	E2	Probe T2 failure

Information Menu

The information available in the menu is shown below:

Symbol	Reason	Symbol	Reason
t1	Instant probe 1 temperature	tLo	Minimum probe 1 temperature recorded
t2	Instant probe 2 temperature *	end	Compressor working weeks **
t3	Instant probe 3 temperature *	Loc	Keypad state lock
th ₁	Maximum probe 1 temperature recorded		

* Displayed only if enabled (see configuration parameters)

** Displayed only if ACC > 0

User Functions

Start Sequence

For normal operation

- Press and hold the  button for 3 seconds then release.

If pressed and held for 5 seconds then released this will start the 'Test Sequence'.

The test function is a defined sequence of events that will follow a prescribed pattern (dependent upon parameter values). In turn it will operate all electrical elements of the system, simulating a short operating pattern. This was designed to provide a quick and simple evaluation tool to use either during manufacturing or when servicing.

To cancel the Test Sequence

- Press and release the  button during the test sequence.

If not pressed the test will continue and when complete the controller will wait for 1 min, then resume normal operation. (The controller will count to 530 then show 'end'. It will then show the current unit temperature)

Access to the menu and information displayed

- Press and immediately release button 
- With button  or  select the data to be displayed
- Press button  to display the value
- To exit from the menu, press button  or wait for 10 seconds.

Set point: Display and modification

- Press button  for at least half a second to display the set point.
- By keeping button  pressed, use button  or  to set the desired value (adjustment is within the minimum SPL and the maximum SPH limit)
- When button  is released, the new value is stored.

Reset of THI, TLO, CND recordings

- With button  or  select the data to be reset
- Display the value with button 
- While keeping button  pressed, use button .

Standby

When pressing the  button for 3 seconds, will allow the controller to be put on a standby or output control to be resumed (with SB = YES only). When on Standby  will be displayed.

Selection of second parameter group

It is possible to select control parameters between two different pre-programmed groups, in order for the fundamental control parameters to be adapted to changing needs. Changeover from Group I to Group II (and visa versa) may take place **Manually** by pressing  for 2 seconds (with IISM = MAN), or **Automatically** when heavy duty conditions are detected (with IISM = HDD), or when IISM =D12 and the **Auxiliary Input D12** is activated (the activation of D12 selects Group II). If IISM = NON, switchover to Group II is inhibited. The activation of Group II is signalled by the lighting up of relevant LED on the controller display.

Defrost

Automatic Defrost.

Defrost starts automatically as soon as the time set with parameter DFT has elapsed.

- **Time Defrost** With DFM = TIM defrost takes place at regular intervals when the timer reaches the value DFT. For example, with DFM = TIM and DFT = 06, a defrost will take place every 6 hours.
- **Defrost time count backup** At the power-up, if DFB = YES, the defrost timer resumes the time count from where it was left off before the power interruption. Visa versa with DFB=NO, the time count re-starts from 0. In stand-by the accumulated time count is frozen.

Defrost type

Once defrost has started, compressor and defrost outputs are controlled according to parameter DTY. If FID =YES, the evaporator fans are active during defrost.

Resuming Thermostatic Cycle

When defrost is over, if DRN is greater then 0, all outputs will remain off the DRN minutes, in order for the ice to melt completely and the resulting water to drain.

Manual Defrost

To initiate a manual defrost press and hold the defrost button  for 2 seconds.


Fuzzy Logic

'Fuzzy Logic' is an energy saving feature which enables the refrigeration system performance on specific models to be automatically adjusted during operation, for optimum energy performance whilst maintaining the correct internal storage temperature. When enabled it works by identifying periods of high and low usage and applying an appropriate temperature set point and defrost frequency. Additionally the evaporator fan(s) can be caused to cycle (providing 'air stir' only) in low usage periods.

'Fuzzy Logic' operation is controlled by parameter 'IISM'. Setting the value 'HDD' for this parameter will cause the controller to automatically change between the 'economy' and 'performance' operating modes (the actual switching point sensitivity is controlled by parameter 'HDS'). Setting 'IISM' to 'non' will disable the 'Fuzzy Logic' function.

When enabled, and upon the product being switched 'On', 'Fuzzy Logic' will automatically start using the 'economy' settings to control the operation of the temperature and defrost ('SP', 'HYS', and 'DFT'). The controller will remain operating to the values of these settings unless; through monitoring of the air temperature, evaporator temperature and door switch (where T2 probe and door switch are fitted), the controller determines that the usage frequency or temperature variation indicates more demanding operational conditions. In such circumstances the controller will switch to the 'performance' mode (utilising parameters 'IISP', 'IIHY' and 'IIDF'). Upon usage or temperature variation reducing sufficiently the controller will revert back to the 'economy mode'. The evaporator fan operation works in conjunction with, but separate from 'Fuzzy Logic'. Determined by parameter 'FCM', and normally set to 'TIM', the fans will run continuously when the compressor is on, subject to the door switch operation (where fitted). During the compressor off cycle the fans will operate in an 'air stir' mode (controlled by parameters 'FT1', 'FT2' and 'FT3'). Where 'FCM' is set to 'non' the fans will run continuously. The fan cycle mode during the 'performance' operation of 'Fuzzy Logic' is controlled by parameter 'IIFC'.

Parameter Setting Wiring Diagram for Synchronising Defrost Start and Termination

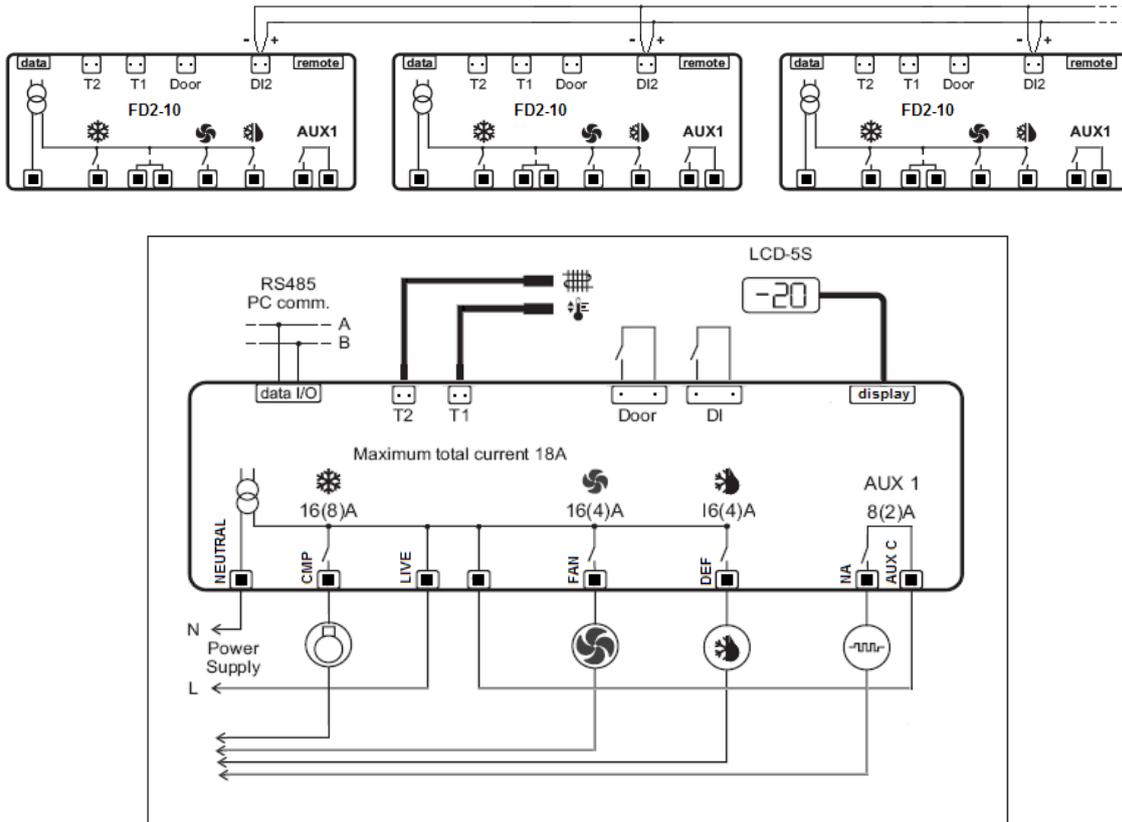

Technical Data

Power Supply

FD2-10 230Vac±10%, 50/60Hz, 3W

Relay Output

Compressor 16(8) A 240Vac
 Defrost 16(4) A 240Vac
 Evap. Fan 16(4) A 240Vac
 Auxiliary Loads 1 8(2) A 240Vac

Input

NTC 10KΩ@25°C

Measurement Range

-50...120°C, -55...240°F
 -50 / -9.9...19.9 / 80°C (NTC 10K Only)

Measurement Accuracy

<0.5°C within the measurement range

CE (Reference norms)

EN60730-1; EN60730-2-9
 EN55022 (Class B)
 EN50082-1

Configuration Parameters

- To get access to the parameter configuration menu, press + for 5 seconds
- With button or select the parameter to be modified.
- Press button and hold briefly to display the value. On releasing the button the controller will then show the next parameter.
- By keeping button pressed, use button or to set the desired value. On releasing the button the controller will store the amended value and then show the next parameter.
- To exit from the setup, press button or wait for 30 seconds.

FD2-10 Default Parameter Values

Parameter	Range	Description	Default FD2-10
SCL		Readout Scale:	2°C
	1°C	Range -50/-9.9.... 19.9/80°C (With INP = SN4 Only)	
	2°C	Range -50 120°C	
	°F	Range -55 240°F	
SPL	-50 ... SPH	Minimum Limit for SP setting	1
SPH	SPL ...120°	Maximum limit for SP setting	3
SP	SPL ... SPH	Temperature set point to be achieved	2
C-H		Temperature Control mode:	REF
	REF	Refrigeration	
	HEA	Heating	
HYS	1 ... 10°	Off/On Thermostat differential	3
CRT	0 ... 30min	Compressor Rest Time	2
CT1	0 ... 30min	Thermostat run time with faulty T1 probe. (CT1 = 0 output with faulty T1 will always be off)	6
CT2	0 ... 30min	Thermostat off time with faulty T1 probe. (CT2=0 & CT1 = >0 output with faulty T1 will always be on)	4
CSD	0 ... 30min	Compressor stop delay after door has been opened (Only if DS = YES)	1
DFM		Defrost Start Mode:	TIM
	Non	Defrost function is disabled	
	TIM	Regular time defrost	
	FRO	Defrost time elapses only in condition of frost accumulation	
DFT	0...99 Hours	Time interval between defrosts	6
DFB		Defrost timer clock	YES
	YES	Following mains interruption, timer resumes count	
	NO	Following mains interruption, timer restarts from zero	
DLI	-50.. 120°	Defrost end temperature (Only if T2 = EPO)	N/A
DTO	1 ... 120min	Maximum defrost duration	20
DTY		Defrost Type:	OFF
	OFF	Timed off cycle defrost (compressor and heater off)	
	ELE	Electric heater defrost (compressor off, heater on)	
	GAS	Hot gas defrost (compressor and heater on)	
DPD	0 ... 240 sec	Evaporator pump down. Timed pause at start of defrost	0
DRN	0 ... 30min	Drain down period	2
DDM		Defrost display mode:	DEF
	RT	Real (actual) air temperature	
	LT	Last temperature display before start of defrost	
	SP	The current set point value.	
	DEF	"DEF"	

DDY	0... 60 min	Defrost display delay period Time DDM is shown following defrost termination	10
FID		Fans in defrost:	YES
	YES	Fans run during defrost	
	NO	Fans do not run during defrost	
FDD	-50 ... 120°	Evaporator fan restart temperature following defrost (Only if T2 = EPO)	5
FTO	0... 120 min	Maximum evaporator fan stop period following defrost	3
FDS	0... 120 sec	Minimum evaporator fan stops (following door opening etc)	20
FCM		Evaporator fan mode during thermostatic control:	TIM
	NON	Fan(s) run continuously	
	TMP	Temperature based control. When compressor is on, fans are on. When compressor is off, fans run as long as temperature difference $T_e - T_a > FDT$. Fans on again with FDH	
	Tim	Time based control. When compressor is on, fans are on. When compressor is off, fans in accordance to parameters FT1, FT2 and FT3.	
FDT	-120 ... 0°	$T_e - T_a$ difference for fans to turn off after compressor stopped. (Only if T2 = EPO and FCM = TMP)	-1
FDH	1 ... 120°	Temperature differential for evaporator fan restart. (Only if T2 = EPO and FCM = TMP)	3
FT1	0 ... 180 Sec	Fan stop delay after compressor stop.	15
FT2	0 ... 30min	Timed fan stop following FT1 (With FT2 = 0 the fans remain on all the time).	3
FT3	0 .. 30min	Timed fan run following FT2 (With FT3 = 0 and FT2 >0 the fans remain off all the time).	2
ATM		Alarm threshold configuration:	REL
	NON	All temperature alarms are inhibited	
	ABS	The value set in ALA and AHA represent actual alarm set points	
	REL	The values set in ALR and AHR are alarm differentials which relate to SP and SP + HYS	
ALA	-50 ... 120°	Low temperature alarm threshold	
AHA	-50 ... 120°	High temperature alarm threshold	
ALR	-12 ... 0°	Low temperature alarm differential (With ALR = 0 the low temperature alarm is excluded)	-5
AHR	0 ... 12°	High temperature alarm differential (With AHR = 0 the low temperature alarm is excluded)	5
ATI		Alarm probe:	T1
	T1	Air temperature probe used for alarm detection	
	T2	Evaporator temperature probe used for alarm detection	
ATD	0... 120min	Delay before alarm temperature warning	90
ADO	0... 30min	Delay before door open alarm warning	8

AHM		Operation in case of high condenser alarm (T2 = CND)	NON
	NON	High condenser temperature alarm inhibited	
	ALR	Condenser warning – ‘HC’ displayed, alarm sounds	
	STP	As ‘ALR’ with compressor stopped and defrosts suspended	
AHT	-50 ... 120°	Condenser alarm temperature (T2 = CND)	65
ACC	0...52 Weeks	Condenser cleaning period. (With ACC = 0 condenser cleaning is disabled)	0
IISM		Switchover method to second parameter set:	HDD
	NON	Second parameter set is excluded	
	MAN	Second parameter set is activated/ deactivated by button 	
	HDD	Second parameter activated by ‘heavy’ usage	
	D12	Second parameter set activated by D12 input (D12 = IISM)	
IISL	-50 . IISH	Minimum limit for IISP setting	1
IISH	IISL .. 120°	Maximum limit for IISP setting	1
IISP	IISP...IISH	Temperature set point to be achieved in ‘Mode 2’	1
IIHY	1 ... 10°	Off/on thermostat differential in ‘Mode 2’	3
IIFC		Evaporator fan mode during ‘Mode 2’ thermostatic control:	NON
	NON	Fans(s) run continuously	
	TMP	Temperature based control. When compressor is on, fans are on. When compressor is off, fans run as long as temperature difference $T_e - T_a > FDT$. Fans on again with FDH	
	TIM	Time based control. When compressor is on, fans are on. When compressor is off, fans in accordance to parameters FT1, FT2 and FT3.	
HDS	1 ... 5	Controller sensitivity for switch over between ‘Modes’ and 2. (1 = minimum, 5 = maximum)	3
IIDF	0 ... 99hours	Time interval between defrosts in ‘Mode 2’.	6
SB		Standby button operation:	YES
	YES	Standby button enabled	
	No	Standby button disabled	
DS		Door switch operation (switch made when door closed):	YES
	YES	Door switch enabled	
	NO	Door switch disabled	
DI2		Configuration digital input operation:	NON
	NON	Digital input 2 not activated	
	HPS	High pressure alarm when contact opens	
	IISM	‘Mode 2’ parameters active when contact closes	
	RDS	Defrost initiated when contact closes	
	DS2	Second door switch function (operated ‘in series’ with DS)	
LSM		Light control mode:	NON
	NON	Digital input 2 not activated	
	MAN	Light output operation is activated/deactivated by button  (With OA1 = LGT)	
	DOR	Light output is switched on when door is opened (With OA1 = LGT and DS = YES)	
	NDR	Light output is switched off when door is opened. (With OA1 = LGT and DS = YES)	

OA1		Auxiliary relay operation:	NON
	NON	Output disabled (always off)	
	0-1	Contacts open/close with standby/on mode	
	LGT	Output enabled for light control	
	AL0	Contacts open when an alarm condition occurs	
	AL1	Contacts close when an alarm condition occurs (Relay contacts open when in standby mode)	
INP		Temperature sensor(s) type:	SN4
	SN4	10k NTC type thermistor (red writing)	
	ST1	1k PTC type thermistor (Black Writing)	
OS1	-12.5...12.5°C	Air temperature probe (T1) offset.	0
T2		T2 Probe function:	NON
	NON	T2 Probe disabled	
	EPO	Evaporator temperature monitoring	
	CND	Condenser temperature monitoring	
OS2	-12.5...12.5°C	T2 probe temperature offset	0
TLD	1 ... 30min	Delay for min (TLO) and max. (THI) temperature logging	10
SIM	0 ... 100	Display Slowdown	5
ADR	1... 255	FD2-10 address for PC communication	1

Individual Unit Controller Parameter Values

FOSTER FD2-10						FSL400H	FSL400L	FSL800H	FSL800L	FSL400M & FSL800M
Reg	Par	Min	Mid	Max	Description	C	I	C	I	O
253	SCL	1°C	°F	2°C	Readout scale.	2°C	2°C	2°C	2°C	2°C
200	SPL	-50°	SPH	Minimum limit for SP setting.	1	-21	1	-21	-2
202	SPH	SPL	120°	Maximum limit for SP setting.	3	-19	3	-19	0
204	SP	SPL	SPH	Temperature set point to be achieved.	1	-21	1	-21	-2
268.1	C-H	REF	HEA	Temperature control mode.	REF	REF	REF	REF	REF
214	HYS	1°	10°	Off / On thermostat differential.	4	4	4	4	2
216	CRT	0 min	30 min	Compressor rest time.	2	2	2	2	2
217	CT1	0 min	30 min	Thermostat run time with faulty T1 probe.	6	6	6	6	6
218	CT2	0 min	30 min	Thermostat off time with faulty T1 probe.	4	4	4	4	4
219	CSD	0 min	30 min	Compressor stop delay after door has been opened. (Only if DS = YES).	1	1	1	1	1
220	DFM	NON	FRO	TIM	Defrost start mode.	TIM	TIM	TIM	TIM	TIM
221	DFT	0 hours	99 hours	Time interval between defrosts.	6	6	6	6	6
268.4	DFB	NO	YES	Defrost timer clock.	YES	YES	YES	YES	YES
206	DLI	-50°	120°	Defrost end temperature (Only if T2 = EPO).	20	20	20	20	20
223	DTO	1 min	120 min	Maximum defrost duration.	20	20	20	20	20
224	DTY	OFF	ELE	GAS	Defrost type.	OFF	ELE	OFF	ELE	ELE
225	DPD	0 sec	240 sec	Evaporator pump down. Timed pause at start of defrost.	0	0	0	0	0
226	DRN	0 min	30 min	Drain down period.	2	2	2	2	2
227	DDM	RT	SP, DEF	LT	Defrost display mode.	DEF	DEF	DEF	DEF	DEF
228	DDY	0 min	60 min	Defrost display delay period.	10	10	10	10	10
267.5	FID	NO	YES	Fans in defrost.	YES	NO	YES	NO	NO
207	FDD	-50°	120°	Evaporator fan restart temperature following defrost. (Only if T2 = EPO).	5	0	5	0	0
229	FTO	0 min	120 min	Maximum evaporator fan stop period following defrost.	3	3	3	3	3
237	FDS	0 sec	120 sec	Minimum evaporator fan stop (following door opening etc.).	20	20	20	20	20
230	FCM	NON	TIM	TMP	Evaporator fan mode during thermostatic control.	TIM	TIM	TIM	TIM	TIM

232	FDT	-120°	0°	Te-Ta difference for fans to turn off after compressor stopped. (Only if T2 = EPO and FCM = TMP).	-1	-1	-1	-1	-1
233	FDH	1°	120°	Temperature differential for evaporator fan restart. (Only if T2 = EPO and FCM = TMP).	3	3	3	3	3
234	FT1	0 sec	180 sec	Fan stop delay after compressor stop.	15	15	15	15	15
235	FT2	0 min	30 min	Timed fan stop following FT1. (With FT2 = 0 the fans remain on all the time).	0	0	0	0	0
236	FT3	0 min	30 min	Timed fan run following FT2. (With FT3 = 0 & FT2 > 0 the fans remain off all the time).	2	2	2	2	2
238	ATM	NON	REL	ABS	Alarm threshold configuration.	REL	REL	REL	REL	REL
208	ALA	-50°	120°	Low temperature alarm threshold.	-2	-2	-2	-2	-2
209	AHA	-50°	120°	High temperature alarm threshold.	8	8	8	8	8
239	ALR	-12°	0°	Low temperature alarm differential. (With ALR = 0 the low temperature alarm is excluded).	-5	-5	-5	-5	-5
240	AHR	0°	12°	High temperature alarm differential. (With AHR = 0 the low temperature alarm is excluded).	5	5	5	5	5
241	ATI	T1	T2	Alarm probe.	T1	T1	T1	T1	T1
242	ATD	0 min	120 min	Delay before alarm temperature warning.	90	90	90	90	90
243	ADO	0 min	30 min	Delay before door open alarm warning.	8	8	8	8	8
244	AHM	NON	STP	ALR	Operation in case of high condenser alarm (T2 = CND).	NON	NON	NON	NON	NON
210	AHT	-50°	120°	Condenser alarm temperature (T2 = CND).	65	65	65	65	65
245	ACC	0 weeks	52 weeks	Condenser cleaning period. (With ACC = 0 condenser cleaning is disabled).	0	0	0	0	0
247	IISM	NON	HDD, DI2	MAN	Switchover method to second parameter set.	HDD	HDD	HDD	HDD	HDD
201	IISL	-50°	IISH	Minimum limit for IISP setting.	1	-21	1	-21	-2
203	IISH	IISL	120°	Maximum limit for IISP setting.	1	-21	1	-21	0
205	IISP	IISL	IISH	Temperature setpoint to be achieved in 'Mode 2'.	1	-21	1	-21	-2
215	IIHY	1°	10°	Off / On thermostat differential in 'Mode 2'.	4	4	4	4	2
231	IIFC	NON	TIM	TMP	Evaporator fan mode during 'Mode 2' thermostatic control.	NON	NON	NON	NON	NON
246	HDS	1	5	Controller sensitivity for switch over between 'Modes' 1 and 2. (1 = minimum, 5 = maximum).	3	3	3	3	3
222	IIDF	0 hours	99 hours	Time interval between defrosts in 'Mode 2'.	6	6	6	6	6
268.7	SB	NO	YES	Standby button operation.	YES	YES	YES	YES	YES
268.0	DS	NO	YES	Door switch operation (switch made when door closed).	NO	NO	NO	NO	NO
251	DI2	NON	IISM, RDS, DS2	HPS	Configurable digital input operation.	NON	NON	NON	NON	NON
248	LSM	NON	DOR, NDR	MAN	Light control mode.	NON	NON	NON	NON	NON

249	OA1	NON	LGT, AL0, AL1	0-1	Auxiliary relay operation.	0-1	0-1	0-1	0-1	0-1
268.2	INP	ST1	SN4	Temperature sensor(s) type.	SN4	SN4	SN4	SN4	SN4
256	OS1	- 12.5°C	12.5°C	Air temperature probe (T1) offset.	0	0	0	0	0
250	T2	NON	EVP	CND	T2 probe function.	NON	EVP	NON	EVP	EVP
251	OS2	- 12.5°C	12.5°C	T2 probe temperature offset.	0	0	0	0	0
252	TLD	1 min	30 min	Delay for min. (TLO) and max. (THI) temperature logging.	10	10	10	10	10
254	SIM	0	100	Display slowdown.	5	5	5	5	5
255	ADR	1	255	FD2-10 address for PC communication	1	1	1	1	1

Parameters ALA and AHA will not be visible when ATM is set at REL.
Parameters ALR and AHR will not be visible if ATM is changed to ABS.



Technical Data Slimline Cabinets

Model	Storage Temp	Gas	Gas Charge	Compressor	Capillary	Defrost Type	Voltage	Power Consumption		Fuse Rating
								Watts	Amps	
FSL400H	+1 ⁰ c to +4 ⁰ c	R134a	310 grms	FR75GX	3.0m x 0.042	Timed Off Cycle	230/50/1	280	2.1	13amps
FSL400L	-18 ⁰ c to -21 ⁰ c	R404a	285 grms	SC15CL	2.5m x 0.042	Electric	230/50/1	584	3.8	13amps
FSL400M	-2 ⁰ c to +2 ⁰ c	R134a	310 grms	FR75GX	3.0m x 0.042		230/50/1			
FSL800H	+1 ⁰ c to +4 ⁰ c	R134a	400 grms	SC12GX	3.0m x 0.054	Timed Off Cycle	230/50/1	520	3.6	13amps
FSL800L	-18 ⁰ c to -21 ⁰ c	R404a	350 grms	SC21CLX	3.0m x 0.054	Electric	230/50/1	758	4.1	13amps
FSL800M	-2 ⁰ c to +2 ⁰ c	R134a	400 grms	SC12GX	3.0m x 0.054		230/50/1			

Technical Data Slimline Cabinets with R290 Refrigerant

Model	Storage Temp	Gas	Gas Charge	Compressor	Capillary	Defrost Type	Voltage	Power Consumption		Fuse Rating
								Watts	Amps	
FSL400H	+1 ⁰ c to +4 ⁰ c	R290	150grms	TL5CNX	3.0m x 0.042	Timed Off Cycle	230/50/1	280	2.1	13amps

Slimline High Temp (Integral and Remote Models) Wiring Diagram

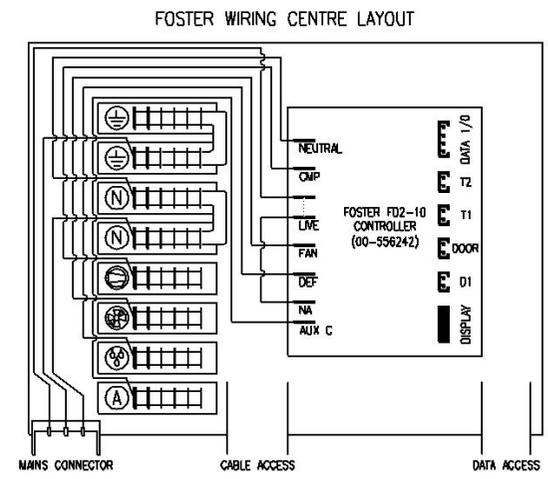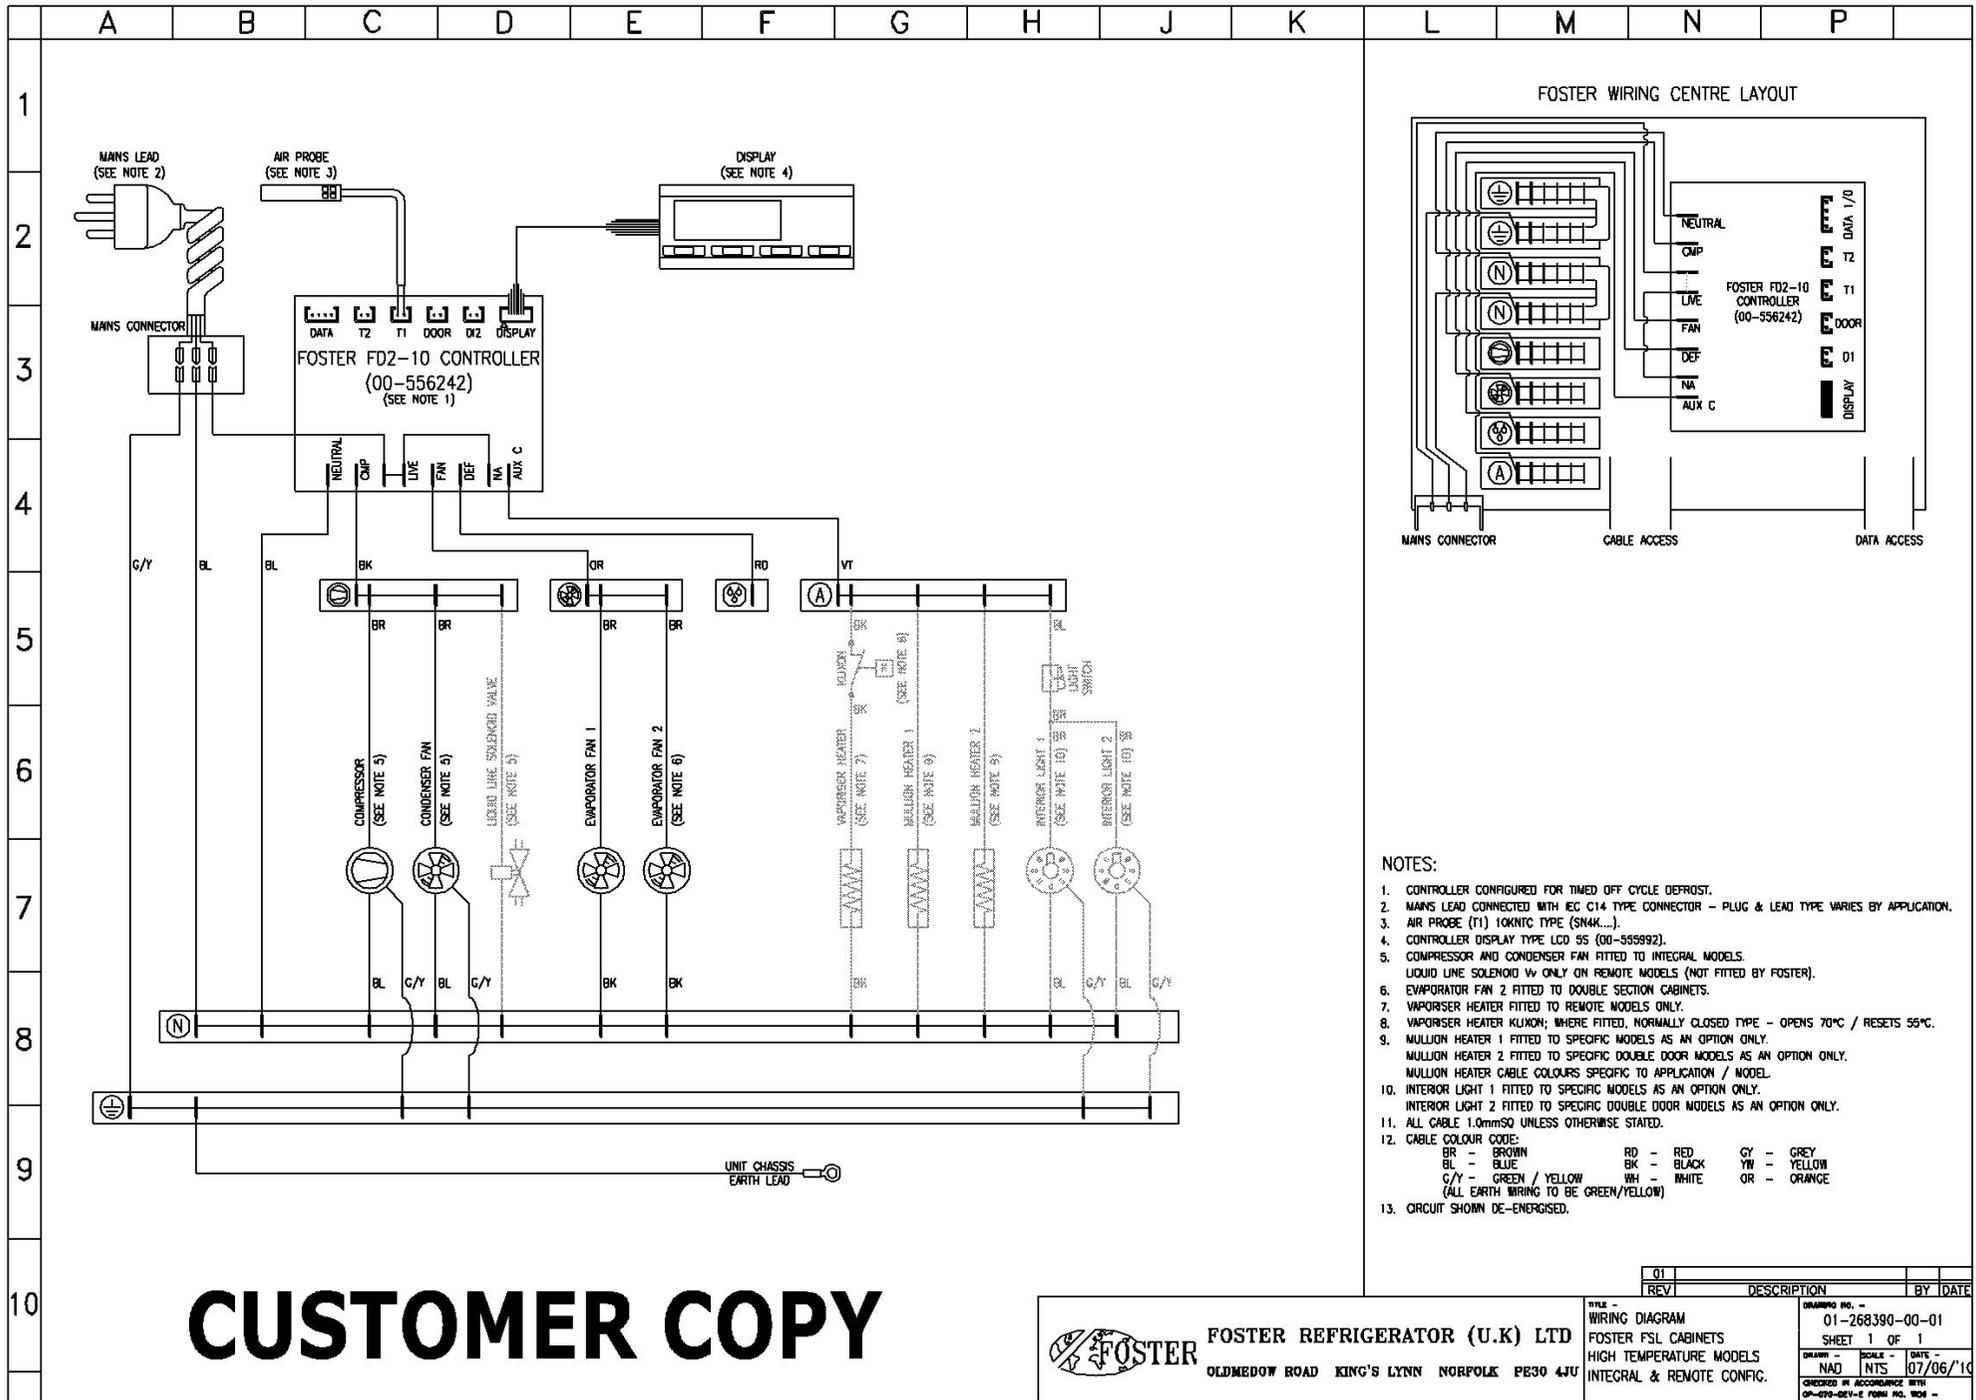

- NOTES:**
- CONTROLLER CONFIGURED FOR TIMED OFF CYCLE DEFOST.
 - MAINS LEAD CONNECTED WITH EC C14 TYPE CONNECTOR - PLUG & LEAD TYPE VARIES BY APPLICATION.
 - AIR PROBE (T1) 10K Ω TYPE (SMAK...).
 - CONTROLLER DISPLAY TYPE LCD 55 (00-555992).
 - COMPRESSOR AND CONDENSER FAN FITTED TO INTEGRAL MODELS.
LIQUID LINE SOLENOID VV ONLY ON REMOTE MODELS (NOT FITTED BY FOSTER).
 - EVAPORATOR FAN 2 FITTED TO DOUBLE SECTION CABINETS.
 - VAPORISER HEATER FITTED TO REMOTE MODELS ONLY.
 - VAPORISER HEATER KUXON; WHERE FITTED, NORMALLY CLOSED TYPE - OPENS 70°C / RESETS 55°C.
 - MULLION HEATER 1 FITTED TO SPECIFIC MODELS AS AN OPTION ONLY.
MULLION HEATER 2 FITTED TO SPECIFIC DOUBLE DOOR MODELS AS AN OPTION ONLY.
MULLION HEATER CABLE COLOURS SPECIFIC TO APPLICATION / MODEL.
 - INTERIOR LIGHT 1 FITTED TO SPECIFIC MODELS AS AN OPTION ONLY.
INTERIOR LIGHT 2 FITTED TO SPECIFIC DOUBLE DOOR MODELS AS AN OPTION ONLY.
 - ALL CABLE 1.0mm² UNLESS OTHERWISE STATED.
 - CABLE COLOUR CODE:
BR - BROWN RD - RED GY - GREY
BL - BLUE BK - BLACK YW - YELLOW
G/Y - GREEN / YELLOW WH - WHITE OR - ORANGE
(ALL EARTH WIRING TO BE GREEN/YELLOW)
 - CIRCUIT SHOWN DE-ENERGISED.

CUSTOMER COPY





FOSTER REFRIGERATOR (U.K) LTD
OLDMEDOW ROAD KING'S LYNN NORFOLK PE30 4JU

REV	DESCRIPTION	BY	DATE
01			

TITLE - WIRING DIAGRAM
 FOSTER FSL CABINETS
 HIGH TEMPERATURE MODELS
 INTEGRAL & REMOTE CONFIG.

DRAWING NO. - 01-268390-00-01
 SHEET 1 OF 1
 DRAWN - NAD CHECKED - INTS DATE - 07/06/10
 DESIGNED BY ACCORDANCE WITH OP-070-REV-E FORM NO. 1008 -

Slimline Low/Meat Temp (Integral and Remote Models) Wiring Diagram

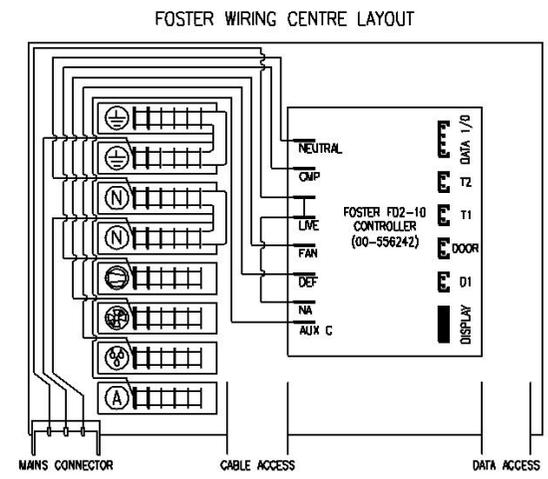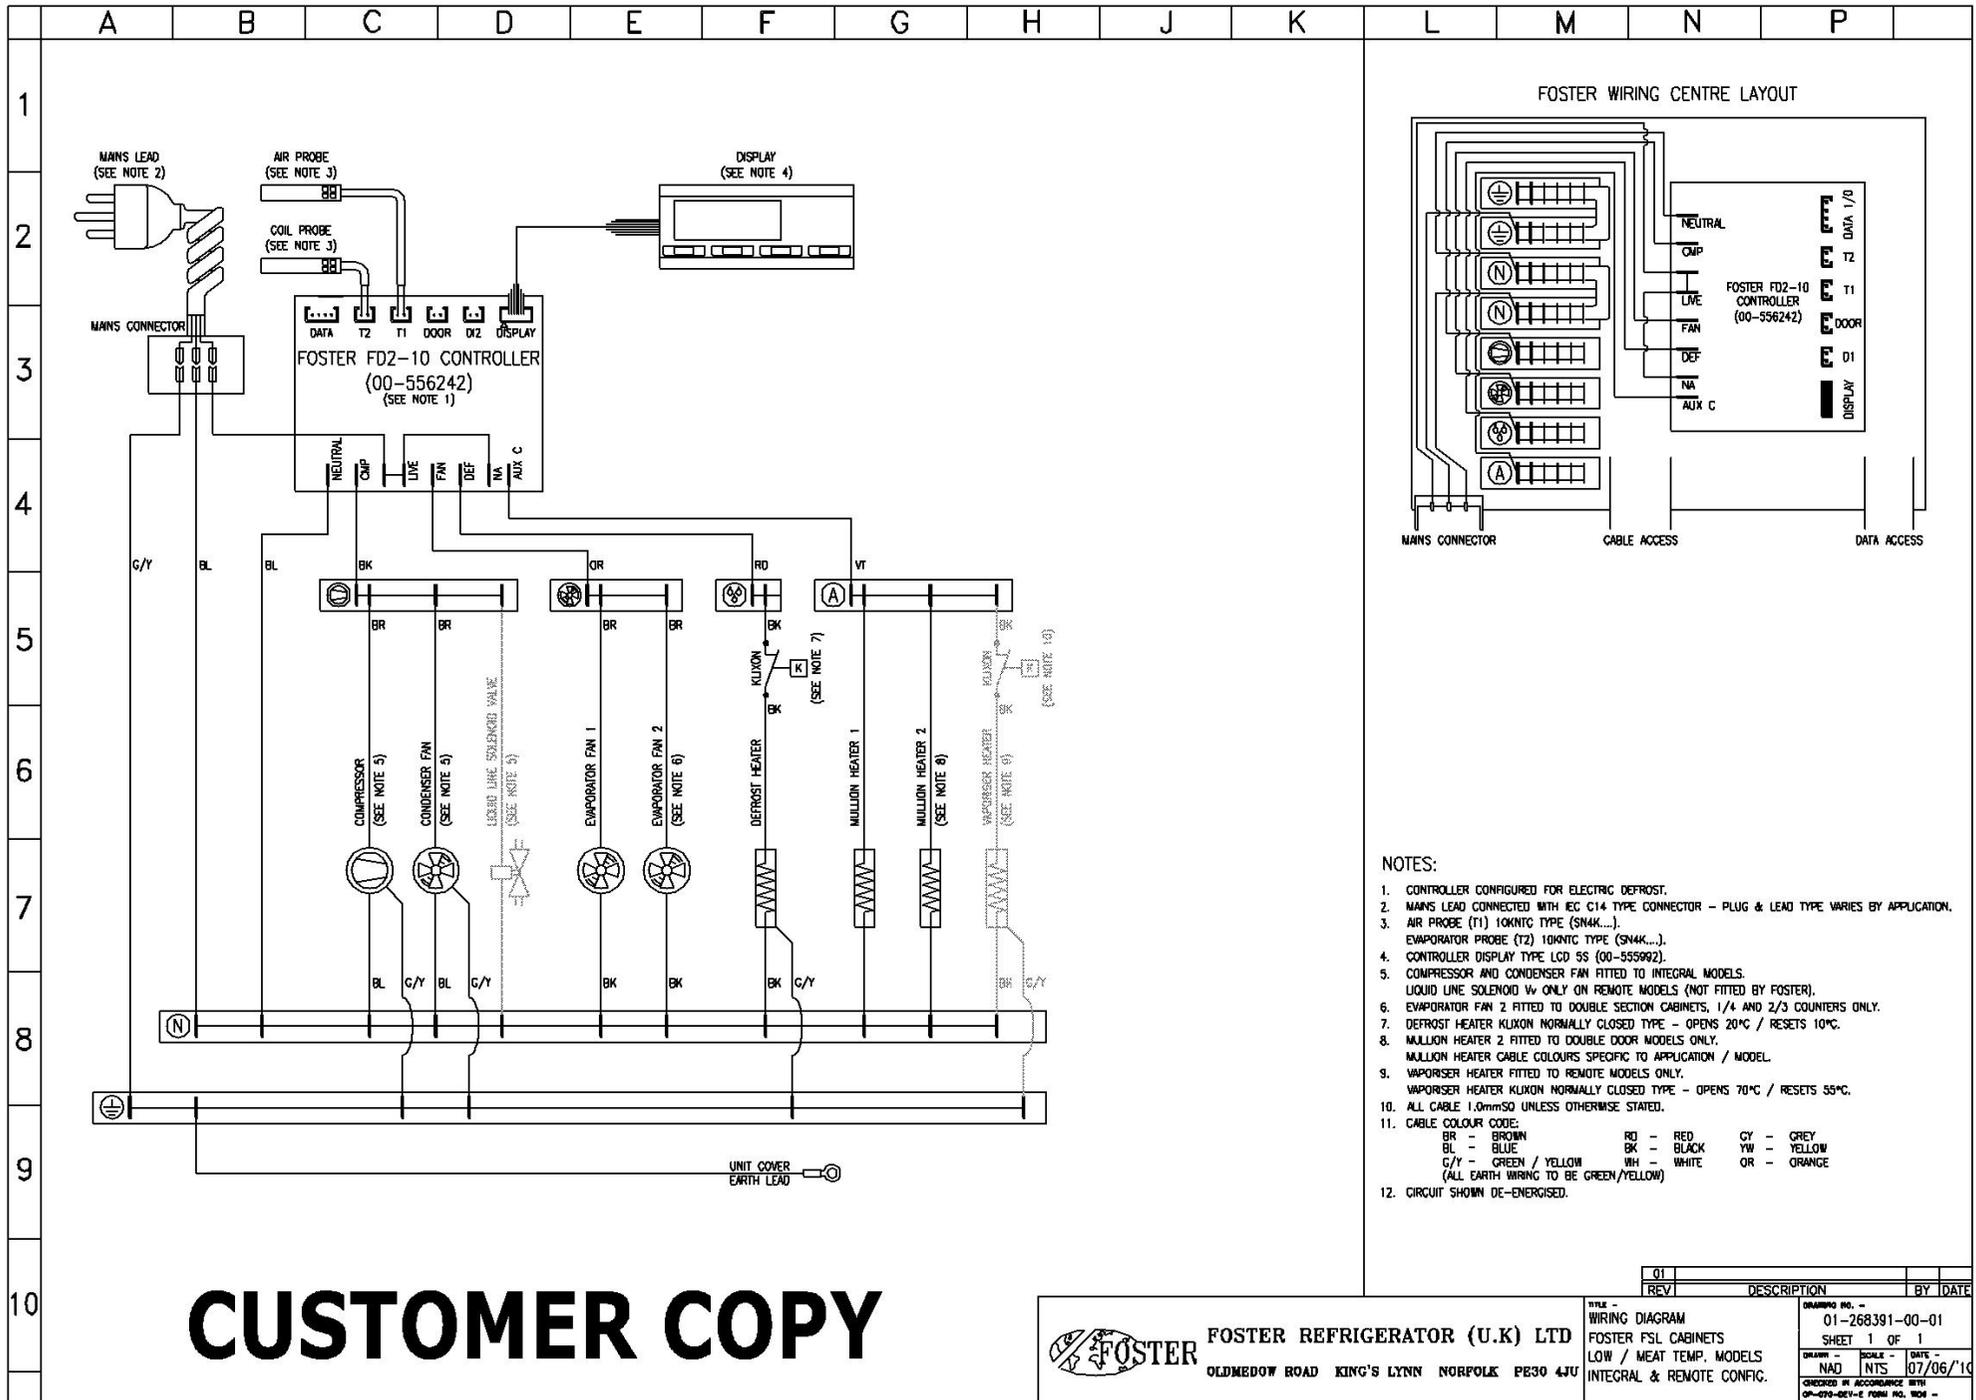

- NOTES:
- CONTROLLER CONFIGURED FOR ELECTRIC DEFROST.
 - MAINS LEAD CONNECTED WITH EC C14 TYPE CONNECTOR - PLUG & LEAD TYPE VARIES BY APPLICATION.
 - AIR PROBE (T1) 10KΩ TYPE (SN4K...).
 - EVAPORATOR PROBE (T2) 10KΩ TYPE (SN4K...).
 - CONTROLLER DISPLAY TYPE LCD 5S (00-555982).
 - COMPRESSOR AND CONDENSER FAN FITTED TO INTEGRAL MODELS. LIQUID LINE SOLENOID VV ONLY ON REMOTE MODELS (NOT FITTED BY FOSTER).
 - EVAPORATOR FAN 2 FITTED TO DOUBLE SECTION CABINETS, 1/4 AND 2/3 COUNTERS ONLY.
 - DEFROST HEATER KUXION NORMALLY CLOSED TYPE - OPENS 20°C / RESETS 10°C.
 - MULLION HEATER 2 FITTED TO DOUBLE DOOR MODELS ONLY. MULLION HEATER CABLE COLOURS SPECIFIC TO APPLICATION / MODEL.
 - VAPORISER HEATER FITTED TO REMOTE MODELS ONLY. VAPORISER HEATER KUXION NORMALLY CLOSED TYPE - OPENS 70°C / RESETS 35°C.
 - ALL CABLE 1.0mm² UNLESS OTHERWISE STATED.
 - CABLE COLOUR CODE:
 BR - BROWN RD - RED GY - GREY
 BL - BLUE BK - BLACK YW - YELLOW
 G/Y - GREEN / YELLOW WH - WHITE OR - ORANGE
 (ALL EARTH WIRING TO BE GREEN/YELLOW)
 - CIRCUIT SHOWN DE-ENERGISED.

CUSTOMER COPY




FOSTER REFRIGERATOR (U.K) LTD
 OLDMEADOW ROAD KING'S LYNN NORFOLK PE30 4JU

REV	DESCRIPTION	BY	DATE
01			

TITLE - WIRING DIAGRAM
 FOSTER FSL CABINETS
 LOW / MEAT TEMP. MODELS
 INTEGRAL & REMOTE CONFIG.

DRAWING NO. - 01-268391-00-01
 SHEET 1 OF 1
 DRAWN - NAD CHECKED - NTS DATE - 07/06/10
 DESIGNED BY ACCORDANCE WITH OP-070-REV-E FORM NO. 908 -

Air and Evaporator Probe Details / Diagram

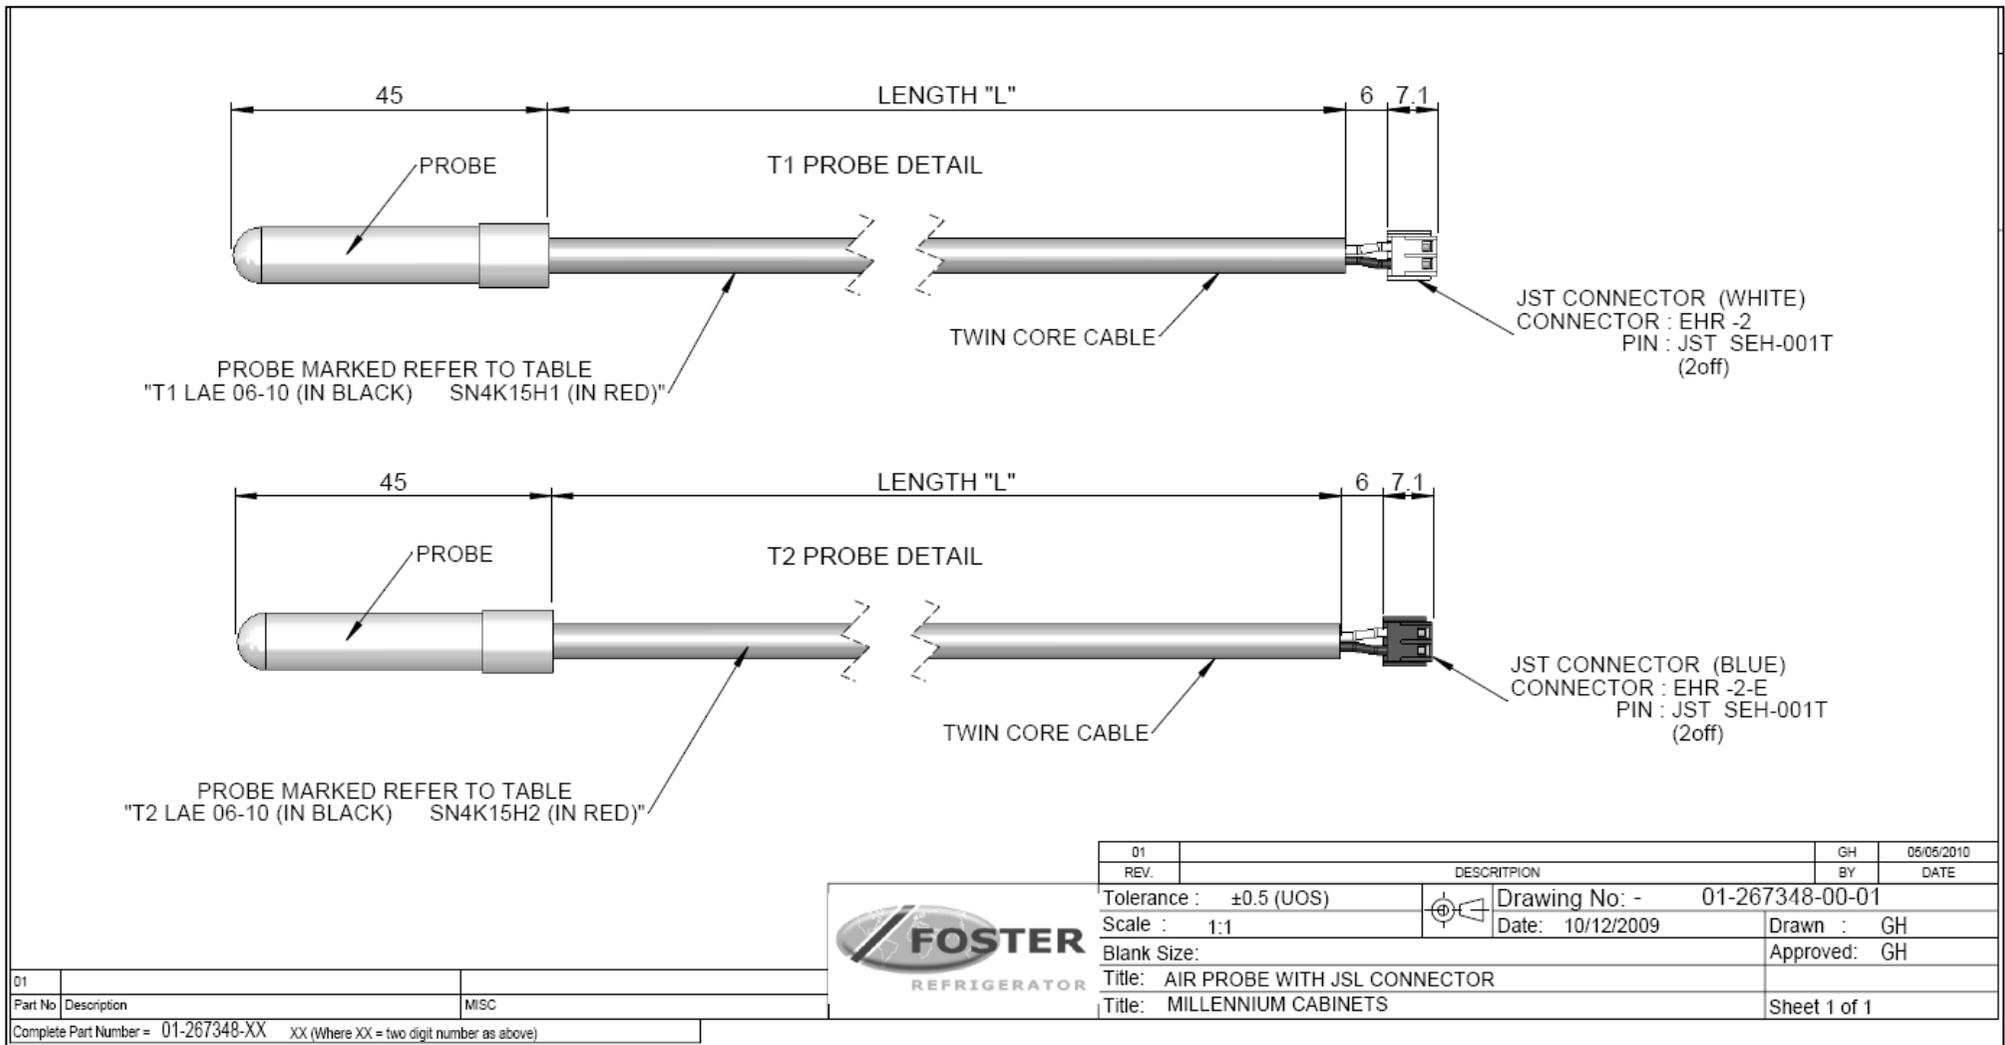

Probe Air 2.5M SN4K15H1 (00-556248)

Probe Evap 2.5M SN4K15H2 (00-556251)

Troubleshooting

Problem	Possible Cause	Solution	
Compressor will not start	No voltage in socket	Use voltmeter to check	
	Electrical conductor or wires may be cut	Use ohmmeter to check for continuity	
	 Defective electrical component: thermostat, relay, thermal protector etc	Replace defective component	
	Compressor motor has a winding open or shorted	Measure ohmic resistance of main and auxiliary winding using ohmmeter. Compare with correct values	
	 Compressor stuck	Change compressor	
	Temperature control contacts are open	Repair or replace the contacts	
	Incorrect wiring	Check wiring diagram and correct	
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker	
	Power cord unplugged	Plug in power cord.	
	Controller set too high	Set controller to lower temperature.	
	Cabinet in defrost cycle	Wait for defrost cycle to finish	
	The temperature is too cold	Controller is set at a very cold position	Set to warmer position and check if the compressor stops according to controllers operating range.
		Controller does not disconnect the condensing unit	Check the insulation of the thermostat. If problem persists, change the thermostat
Control contacts are stuck closed		Change the control. Check amperage load	
Defective or incorrect temperature control		Determine correct control and replace.	
The temperature is not cold enough		Controller is set at a very warm position	Adjust to colder setting
	 Condenser is dirty	Clean condenser	
	 The refrigerator has been placed at an inadequate location	The unit must not be near stoves, walls that are exposed to the sun, or places that lack sufficient air flow.	
	 Compressor is inefficient or there is a high pressure due to the air in the system	If there is air in the system, purge and recharge	
	  Iced up evaporator coil	Check temperature control, refrigerant charge, and defrost mechanism. Remove all ice manually and start over.	
	Restriction in system	Locate exact point of restriction and correct	
	 The refrigerator has been used improperly	The shelves must never be covered with any type of plastic or other material that will block the circulation of cold air within the refrigerator.	
	 Too many door openings	Advise user to decrease if possible	
	 Excessive heat load placed in cabinet	Advise user not to put in products that are too hot.	
	 The refrigerator has been overcharged with the refrigerant gas	Check to see if condensation or ice crystals have formed on the suction line. If so, charge with the correct amount of gas.	

		The refrigerant gas is leaking	Find the location of gas leak in order to seal and replace the defective component. Change the drier. Perform a good vacuum and recharge unit.
	 	The evaporator and/or condenser fans are not working	Check electrical connections and make sure that the fan blade isn't stuck. Replace the fan motor if it doesn't work.
		Blocking air flow	Re-arrange product to allow for proper air flow. Make sure there is at least four inches of clearance from evaporator.
		Fuse blown or circuit breaker tripped	Replace fuse or reset circuit breaker.
Electrical Shocks		Wires or electrical components are in direct contact with metallic parts.	Check for appropriate insulation on the connections of each component.
Noise		The refrigerator is not properly levelled	Check if the noise goes away after you level the refrigerator
		The condenser is not fastened correctly. Copper tubing is in contact with metal	While the compressor is working, check to see if metal parts are in contact with one another and/or if the screws that fasten the condenser are tightened.
		The evaporator and/or condenser fans are loose	Check if the fans are securely fastened. Also, check if the fan blades are loose, broken or crooked. If so, change the faulty blade.
		Compressor has an internal noise	If the noise persists after all other measures have been taken, it may be originating from the compressor.
		Loose part(s)	Locate and tighten loose part(s)
Extreme condensation inside the refrigerator		Controller is set at a very cold position	Set the controller to a warmer position & check to see if compressor stops as should.
		The outside environment's relative humidity is very high (over 75%)	This type of occurrence is caused by local climatic conditions and not by the refrigeration unit.
		The refrigerator door wont shut completely	Check the door and/or the magnetic gasket. Adjust the door hinges if needed; replace the gasket if broken.
		The refrigerator had been placed at an inadequate location	The unit must not be near sources that produce too much heat.
No illumination (Glass door models only)		The light switch is "off" position	Press the light switch to "on" position
		False contact on the light switch, the fluorescent tube, or the ballast	Inspect all connections
		Light switch, ballast and/or fluorescent tube are damaged	Replace the damaged component.
Condensing unit runs for long periods of time		Excessive amount of warm product placed in cabinet	Advise user to leave adequate time for products to cool down
		Prolonged door opening or door ajar	Advise user to ensure doors are closed when not in use and to avoid opening doors for long periods of time.
		Door gasket(s) not sealing properly	Ensure gaskets are snapped in completely. Remove gasket and wash with soap and water. Check condition of gasket & replace if necessary

	Dirty condenser coil	Clean condenser coil
	Evaporator coil iced over	Unplug unit and allow coil to defrost. Make sure thermostat is not set too cold. Ensure that door gasket(s) are sealing properly. Select manual defrost and ensure system works.

Notes



Foster European Operations

France

Foster Refrigerator France SA

Tel: (33) 01 34 30 22 22. Fax: (33) 01 30 37 68 74.

Email: info@foster-fr.com

Germany

Foster Refrigerator Gmbh,

Tel: (49) 781 990 7840. Fax (49) 781 990 7844.

Email: info@foster-gmbh.de

Foster Refrigerator

Oldmedow Road

Kings Lynn

Norfolk

PE30 4JU

Tel: 0843 216 8833

Fax: 0843 216 4707

Website: www.fosterrefrigerator.co.uk

Email: support@foster-uk.com

a Division of 'ITW (UK) Ltd'

SLIMLINE FD2-10/SM 08/10